


LCD TV SERVICE MANUAL

CHASSIS: ML-041B

MODEL: RM-15LA66K

CAUTION

BEFORE SERVICING THE CHASSIS, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

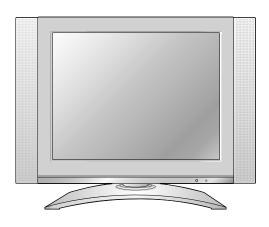

CONTENTS

CONTENTS	2
PRODUCT SAFETY	3
SPECIFICATION	4
TIMING CHART	11
ADJUSTMENT INSTRUCTION	12
TROUBLE SHOOTING	15
BLOCK DIAGRAM	20
WIRING DIAGRAM	22
EXPLODED VIEW	23
EXPLODED VIEW PARTS LIST	24
REPLACEMENT PARTS LIST	25
SVC. SHEET	

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by \triangle in the Schematic Diagram and Replacement Parts List.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION. Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

General Guidance

An **isolation Transformer should always be used** during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and it's components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1W), keep the resistor 10mm away from PCB.

Keep wires away from high voltage or high temperature parts.

X-RAY Radiation

Warning:

The source of X-RAY RADIATION in this TV receiver is the High Voltage Section and the LCD PANEL.

For continued X-RAY RADIATION protection, the replacement panel must be the same type panel as specified in the Replacement Parts List.

To determine the presence of high voltage, use an accurate high impedance HV meter.

Adjust brightness, color, contrast controls to minimum.

Measure the high voltage.

The meter reading should indicate

23.5 \pm 1.5KV: 14-19 inch, 26 \pm 1.5KV: 19-21 inch, 29.0 \pm 1.5KV: 25-29 inch, 30.0 \pm 1.5KV: 32 inch

If the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.

Before returning the receiver to the customer,

always perform an **AC leakage current check** on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone iacks. etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between $1M\Omega$ and $5.2M\Omega$.

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

Do not use a line Isolation Transformer during this check.


Connect 1.5K/10watt resistor in parallel with a 0.15uF capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which is corresponds to 0.5mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

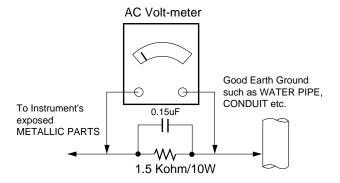

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the *SAFETY PRECAUTIONS* on page 3 of this publication.

NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

- Always unplug the receiver AC power cord from the AC power source before;
 - Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.
 - **CAUTION:** A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
- Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe.Do not test high voltage by "drawing an arc".
- Do not spray chemicals on or near this receiver or any of its assemblies.
- 4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10% (by volume) Acetone and 90% (by volume) isopropyl alcohol (90%-99% strength)

CAUTION: This is a flammable mixture.

Unless specified otherwise in this service manual, lubrication of contacts in not required.

- Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
- Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
- Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.
 - Always remove the test receiver ground lead last.
- Use with this receiver only the test fixtures specified in this service manual.

CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called *Electrostatically Sensitive (ES) Devices*. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

 Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.

- After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
- Use only a grounded-tip soldering iron to solder or unsolder ES
 devices
- Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
- Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
- Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
- Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

 Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

- 1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or $500\,^{\circ}\text{F}$ to $600\,^{\circ}\text{F}$.
- Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
- 3. Keep the soldering iron tip clean and well tinned.
- Thoroughly clean the surfaces to be soldered. Use a mall wirebristle (0.5 inch, or 1.25cm) brush with a metal handle.
 Do not use freon-propelled spray-on cleaners.
- 5. Use the following unsoldering technique
 - a. Allow the soldering iron tip to reach normal temperature. (500 $^{\circ}\text{F}$ to 600 $^{\circ}\text{F})$
 - b. Heat the component lead until the solder melts.
 - c. Quickly draw the melted solder with an anti-static, suctiontype solder removal device or with solder braid. CAUTION: Work quickly to avoid overheating the circuitboard printed foil.
- 6. Use the following soldering technique.
 - a. Allow the soldering iron tip to reach a normal temperature (500 $^{\circ}$ F to 600 $^{\circ}$ F)
 - First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
 - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
 - **CAUTION:** Work quickly to avoid overheating the circuit board printed foil.
 - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

- Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts
- Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

- 1. Carefully insert the replacement IC in the circuit board.
- Carefully bend each IC lead against the circuit foil pad and solder it.
- Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor Removal/Replacement

- Remove the defective transistor by clipping its leads as close as possible to the component body.
- Bend into a "U" shape the end of each of three leads remaining on the circuit board.
- 3. Bend into a "U" shape the replacement transistor leads.
- 4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device Removal/Replacement

- 1. Heat and remove all solder from around the transistor leads.
- 2. Remove the heat sink mounting screw (if so equipped).
- Carefully remove the transistor from the heat sink of the circuit board.
- 4. Insert new transistor in the circuit board.
- 5. Solder each transistor lead, and clip off excess lead.
- 6. Replace heat sink.

Diode Removal/Replacement

- Remove defective diode by clipping its leads as close as possible to diode body.
- Bend the two remaining leads perpendicular y to the circuit board.
- Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
- 4. Securely crimp each connection and solder it.
- Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor

Removal/Replacement

- Clip each fuse or resistor lead at top of the circuit board hollow stake
- Securely crimp the leads of replacement component around notch at stake top.
- 3. Solder the connections.

CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

- 1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
- carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
- Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
- 4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

- Remove the defective copper pattern with a sharp knife.
 Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
- Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
- Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side.

Carefully crimp and solder the connections.

CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

SPECIFICATION

NOTE: Specifications and others are subject to change without notice for improvement.

1. Application range

This specification is applied to ML-041B chassis.

2. Requirement for Test

Testing for standard of each part must be followed in below condition.

- (1) Temperature: 25°C ± 2°C
- (2) Humidity: 65% ± 10%
- (3) Power: Standard input voltage (AC 100-240V, 50/60Hz)
- (4) Measurement must be performed after heat-run more than 30min.
- (5) Adjusting standard for this chassis is followed a special standard.

3.General Specification

No.	Item	Specification	Remark
1	Maker	LPL	LPL
	Туре	TFT Color LCD Module	
	ActiveDisplay Area	15.0 inches(380.16mm) diagonal(Aspect 4:3)	
	Pixel Pitch [mm]	0.297mm(H)x0.297mm(V)xRGB	
	Electrical Interface	LVDS	
	Color Depth	6BIT WITH FRC, 16,777,216 colors	
	Size [mm]	332.8(H)x262.2(V)x18(D)	
	Surface Treatment	Anti Glare(HAZE 3%), Hard Coating(3H)	
	Operating Mode	Normally Black,	
	Back light Unit	4 CCFL(4 lamps)	
	R/T Typ.	R.T.:10ms + F.T.:22ms (MAX)	
2	Maker	HYDIS	HYDIS
	Туре	TFT Color LCD Module	
	ActiveDisplay Area	15.0 inches(380.16mm) diagona	
	Pixel Pitch [mm]	0.297mm(H)x0.297mm(V)xRGB	
	Electrical Interface	LVDS	
	Color Depth		
	Size [mm]	331.6(H)x254.7(V)x12.7(D)	
	Surface Treatment	HAZE25,Hard Coating,	
		ANTI- Glare (3H)	
	Operating Mode	Normally Black	
	Back light Unit	4 CCFL(4 lamps)	
	R/T Typ.	T total(Tr+Td) = $25ms$	
3	Maker	CMO	СМО
	Туре	TFT Color LCD Module	
	ActiveDisplay Area	15.0 inches(380.16mm) diagona	
	Pixel Pitch [mm]	0.304.1mm(H)x228.1mm(V)xRGB	
	Electrical Interface	LVDS	
	Color Depth	RGB 6-BIT 16,194,277Colors	
	Size [mm]	331.6(H)x254.6(V)x13(D)	
	Surface Treatment	Hard Coating, ANTI- Glare (3H)	
	Operating Mode	Normally WHITE	
	Back light Unit	4 CCFL(4 lamps)	
	R/T Typ.	R.T.:22ms + F.T.:38ms (MAX)	

4. Feature and Function

No.	Item	Specification	Remark
1	Teletext	TOP, FLOF,LIST 10 page	Top(option)
2	REMOCON	NEC Code	PAL/ NTSC
3	AV Input	2	Rear(option, NT),
4	S-Vedio Input	1	Rear
5	Component input	1	Rear (option, NT)
6	PERI TV Connector	Full SCART : 1	Rear (option,EU)
7	RGB(VGA)Input	1	D-sub 15 pin
8	H/p input	1	
9	PC Sound input	1	
10	RS-232	YES	Rear (option,Commercial)
11	Discrete IR	NO	
12	2 Carrier Stereo	BG, DK	
13	NICAM Stereo	BG, I, LL'	
14	2 Carrier Dual	BG, DK	
15	NICAM Dual	BG, I, LL'	
16	DW(Double Window) Mode	X	
17	MW(Multi Window) Mode	X	
18	Film Mode	0	
19	Noise Reduction	X	
20	Progressive Scan	0	
21	Motion Detection	X	
22	SRS WOW	X	
23	wivel Speaker	X	
24	Ez-pip	X	
25	ARC	0	
26	DRP	0	
27	DCDI	X	
28	HDCP	X	

5.Optical Character

No.	Item			SI	pecification			Remark
					LPL	HYDIS	AUO	
1	Viewing Angle	R/L,				80/65	60/60	
	<cr≥10></cr≥10>	U/D				80/65	40/60	
2	Luminance	Luminano	e(cd/ m²)		450	500	500	Typical
		Variation			1.3	1.33		MAX/MIN
3	Contrast Ratio				400		300	ALL white/All back
4	CIE Color Coordinates	WHITE	W _X	Тур.	0.289	0.265	0.314	Min =Typ0.03
			W _Y	Тур.	0.304	0.293	0.344	Max =Typ.+0.03
		RED	W _r	Тур.	0.619	0.629	0.632	
			Y _r	Тур.	0.343	0.340	0.361	
		Green	X _g	Тур.	0.298	0.255	0.295	
			Yg	Тур.	0.578	0.601	0.598	
		Blue			0.289	0.141	0.142	
			Yb	Тур.	0.304	0.071	0.102	

6.Engineering Specification

6-1.General Specification(TV)

No.	Item	Specification	Remark
1	Video input applicable system	1)PAL-D/K,B/G,I	
		2)NTSC-M	
		3)SECAM NTSC 4.43'	
2	Receivable broadcasting system	1)PAL/SECAM BG	EU/Non-EU(RZ/RT)
		2)PAL/SECAM DK	(PAL Market)
		3)PAL I/I	
		4)SECAM L/L'	
		5)NTSC M	
		6)PAL-N/M	
		7)NTSC M	7)NTSC Area(RM)
3	RF input channel	VHF : E2 ~ E12	
		UHF : E21 ~ E69	PAL
		CATV : S1 ~ S20	
		HYPER : S21 ~ S41	
		L/L': B,C,D	FRANCE
		VHF: 2 ~ 13	
		UHF : 14 ~ 69	NTSC
		CATV : 1 ~ 125	
		VHF Low: 1~M10	JAPAN
		VHF High: 4~S22	
		UHF: S23~62	
4	Input voltage	AC 100 - 240V/ 50Hz,60HZ	
5	Tuning system	FVS 100 program	PAL, 200PR.(Option)
		FS	NTSC
6	Operting environment	1)Temp : 0 ~ 40 deg	
		2)Humidity: 85%	
7	Storage environment	3)Temp : -20 ~ 60 deg	
		4)Humidity: 85%	

No.	Item		Specification							
1	Power Supply	H/V Sync	Vide	0	Power Consumption	LED Color				
	Normal	On/On	Activ	е	≤ 55W	GREEN				
	Stand By	Off/On			≤ 1W					
	Suspend Mode	On/Off	Off		≤ 1W	RED				
	DPM Off Mode	Off/Off			≤ 1W					
	Cut-off Switch off	-	-		OW	OFF				
					PBP SWAP ▶ ON/OFF					
	ITEM			Remark						
2	D-SUB Pin Configuraion	1: RED		2: Gree	en					
		3: Blue:		4: ID2(GND)					
		5: S.T(GND)		6: RED	GND					
		7: Green GND		8: Blue	GND					
		9: N.C		10: D-0	GND	10: Digital GND				
		11: ID0(GND)		12: SD	Α					
		13: H-Sync		14: V-9	Sync					
		15: SCL		Shell: (GND					
		1) Contrast/Brightness								
		2) H-Position/V-Position								
3	Control Function	3) Tracking : Clock/ Phase	е							
		4) Auto Configure								
		RESET								
4	Y, Pb, Pr					Middle east/ NTSC Area				
5	D4 Jack (525i, 525p, 750p, 1125i)	1: Y 3: Pb 5: Pr 7: Line1 Ready 9: LINE2		2: Y G 4: Pb G 6: Pr G 8: LINE 10: Lin	GND GND	JAPAN Only				
		11: LINE3			/ITCH GND					
		5) 13: Line3 Ready		6) 14:	SWITCH					

6-2.Power

NO	Item	Min	Тур	Max	Unit	Remark
1	AC Power Shut Down Voltage	90		264	V	
2	DC Voltage, Inverter	22.8	24	25.2	V	
3	DC Voltage, LCD Panel	11.4	12	12.6	V	
4	DC Voltage, Audio	14.0	15	16.0	V	
5	DC Voltage, Tuner(5)	4.5	5	5.5	V	
	DC Voltage, Tuner(9)	8.5	9	9.5	V	
6	DC Voltage, Tuning(31)	31	33	35	V	Japan only
7	DC Voltage, VCTi(5)	4.5	5	5.5	V	
	DC Voltage, VCTi(8)	7.5	8	8.5	V	
8	DC Voltage, VCTi(3.3)	3.1	3.3	3.5	V	
	DC Voltage, VCTi(1.8)	1.6	1.8	2.0	V	
9	DC Voltage, GM2221 (3.3)	3.1	3.3	3.5	V	
	DC Voltage, GM2221 (1.8)	1.6	1.8	2.0	V	
10	DC Voltage, Digital (3.3)	2.8	3.3	3.8	V	
11	DC Voltage, Digital (5)	4.5	5	5.5	V	

6-3. Power

NO	Item	Min	Тур	Max	Unit		Remark
1.	Video Input Level	0.85	1	1.15	Vpp	EN-50049	
2.	Audio Input Level	0.4	0.5	0.6	V	NTSC:0.4Vr	ms(Typ)
3.	Audio Input Frequency Response	0.1		7	KHz		
4.	Audio Input S/N	40			DB		
5.	Audio Input Distortion			2	%		
6.	Audio Input Dynamic Range	2			V		
7.	Video Output Level	0.85	1	1.15	Vpp		
8.	Video Output Frequency Response	3.8			MHz		
9.	Video Output S/N	40			DB		
10.	Audio Output Level	0.4	0.5	0.6	V		
11.	Audio Output Frequency Response	0.1		7	KHz		
12.	Audio Output S/N	40			DB		
13.	Audio Output Distortion			2	%		
14.	Video Input Level, R/G/B	0.6	0.7	0.8	Vpp	75 ohm	
15.	Video Input Level, Component(Y, PB, PR)	0.6	0.7	0.8	Vpp	75 ohm	
16.	RGB Input Resolution, Vertical		768		Pixel	Only 20"	640 Pixel
17.	RGB Input Resolution, Horizontal		1280		Pixel		480
18.	RGB Input Horizontal Frequency				KHz	See table 5-	5
19.	RGB Input Frame Rate				Hz	See table 5-	5

6-4. The Others

NO	ltem	Min	Тур	Max	Unit	Remark
1	Search Sensitivity			-85	dBm	
2	Soft Ware Functionality Test					LGE Specification
3	REMOCON Working Sensitivity, Straight	0.1		10	m	
4	REMOCON Working Sensitivity, T/B/L/R	0.1		9	m	30 degree
5	Closed Caption Sensitivity			-70	dBm	NTSC ONLY
6	Teletext Sensitivity			-70	dBm	

7. Signal Timing(Resolution)


7-1. PC Mode

[Table 7] Timming chart of Receivable Mode

* H [dot] / V [line]

		1	1							
Mode	VGA-60	VGA-67	VGA-75	SVGA-56	SVGA-60	SVGA-72	SVGA-75	XGA-70	XGA-75	XGA-60 X
H_display	640	640	640	800	800	800	800	1024	1024	1024
V_display	480	480	480	600	600	600	600	768	768	768
V frequency	60	67	75	56	60	72	75	70	75	60
H_total	800	864	840	1024	1056	1040	1056	1328	1312	1344
H_blanking	160	224	200	224	256	240	256	304	288	304
H_sync	96	64	64	72	128	120	80	136	96	136
H Polarity	NEG.	NEG.	NEG	POS	POS	POS	POS	NEG	POS	NEG
H_bp	48	96	120	128	88	64	160	144	176	136
H_fp	16	64	16	24	40	56	16	24	16	160
H-freq[kHz]	31.469	35.0	37.5	35.156	37.879	48.077	46.875	56.476	60.023	48.3
/Clk[MHz]	25.175	30.24	31.5	36.0	40.0	50.0	49.5	75.0	78.75	65
V_total	525	525	500	625	628	666	625	806	800	806
V_blanking	45	45	20	25	28	66	25	38	32	38
V_sync	2	3	3	2	4	6	3	6	3	6
V Polarity	NEG	NEG	NEG	POS	POS	POS	POS	NEG	POS	NEG
V_bp	33	39	16	22	23	23	21	29	28	29
V_fp	10	3	1	1	1	37	1	3	1	3

TIMING CHART

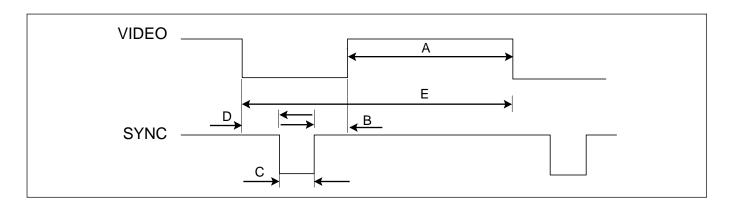

<< Dot Clock (MHz), Horizontal Frequency (kHz), Vertical Frequency (Hz), Horizontal etc... (μs), Vertical etc... (ms) >>

Mode	H/V Sort	Sync Polarity	Dot Clock	Frequency	Total Period (E)	Video Active Time (A)	Front Porch (B)	Sync Duration (D)	Back Porch (F)	Resolution
1	Н	+	25.175	31.468	800	640	16	96	48	640x350
'	V	_	25.175	70.090	449	350	37	2	60	0408330
2	Н	_	28.324	31.469	900	720	18	108	54	720x400
	V	+	20.324	70.082	449	400	13	2	34	7203400
3	Н	-	25.175	31.469	800	640	16	96	48	640x480
3	V	_	25.175	59.94	525	480	10	2	33	0402400
4	Н	_	31.5	37.5	840	640	16	64	120	800x600
4	V	_	31.5	75	500	480	1	3	16	000000
5	Н	+	40.0	37.879	1056	800	40	128	88	800x600
3	V	+	40.0	60.317	628	600	1	4	23	OUUXOUU
6	Н	+	49.5	46.875	1056	800	16	80	160	800x600
0	V	+	49.5	75.0	625	600	1	3	21	OUXOU
7	Н	-	65.0	48.363	1344	1024	24	136	160	1024x768
_ ′	V	_	03.0	60.004	806	768	3	6	21	10248700

ADJUSTMENT INSTRUCTION

1. Application Object

This instruction is for the application to the LCD TV.

2. Adjustment

2.1 Adjustment overview

The unit is set to automatically adjust using the factory automation equipment. However when errors occur, it should be adjusted manually.

2.2 Auto Gain/Offset adjustment

2.2.1 RF Mode adjustment

2.2.1.1 Adjustment preparation

■Conduct Heat Run at the RF fog signals for more than 30 minutes.

2.2.1.2 Auto Gain/Offset adjustment

- ■Press IN-START Key to convert to the adjustment mode using the adjustment (SVC) remote controller, and press VOL+ Key at the Auto Gain menu. (In case of RM-15LA70, press IN-START Key twice)
- Once the adjustment is completed, press the Enter Key to save and finish the adjustment.

2.2.2 Component Mode adjustment

2.2.2.1 Adjustment preparation

- ■Conduct Heat Run at the RF fog signals for more than 30 minutes.
- Connect the Pattern Generator to the Component Jack (Y, Pb, Pr) of LCD TV.

2.2.2.2 Auto Gain/Offset adjustment

- Convert the input mode to the component input.
- Using the Pattern Generator (801GF, VG819) adjust WXGA (1280 X 768) for resolution and Color Bar signals for patterns. Or adjust Color Bar signals in accordance with VG819.
- Press the IN-START Key to convert into the adjustment mode using the adjustment (SVC) remote controller, and press VOL+ Key at the Auto Gain menu.
- Once the adjustment is completed, press the Enter Key to save and finish the adjustment

2.2.3 PC Mode adjustment

2.2.3.1 Adjustment preparation

- ■Conduct Heat Run at the RF fog signals for more than 30 minutes.
- ■Connect the Pattern Generator to 15 Pin D-Sub Jack of LCD TV.

2.2.3.2 Auto Gain/Offset adjustment

- Convert the input mode to PC input.
- Using the Pattern Generator (801GF, VG819) adjust WXGA (1280 X 768) for resolution and 16 Step Gray signals for the pattern. Or adjust the 16 Step (11 Step) Gray signals in accordance with VG819.
- Convert the input mode to PC input and convert to the adjustment mode using the adjustment (SVC) remote controller and pressing the IN-START Key, and then press VOL+ Key at the AutoGain menu.
- Once the adjustment is completed, press the Enter Key to save and finish the adjustment.

2.3 EDID (The Extended Display Identification Data) setting

- Connect the 15 Pin D-Sub Cable to D-Sub Jack.
- Set the input mode of Set to PC.
- Connect the DDC automation equipment to write DDC data.

2.3.1 EDID DATA

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	00	FF	FF	FF	FF	FF	FF	00	1E	6D	39	75	01	01	01	01
10	03	0E	01	00	28	1E	17	78	EΑ	B1	45	A1	58	4F	95	26
20	1D	50	54	AB	8C	00	31	4F	45	4F	61	4F	01	01	01	01
30	01	01	01	01	01	01	64	19	00	40	41	00	26	30	18	88
40	36	00	30	E4	10	00	00	18	00	00	00	FD	00	38	4B	1E
50	3F	08	00	0A	20	20	20	20	20	20	00	00	00	FC	00	52
60	4D	31	35	4C	41	36	36	0A	20	20	20	20	00	00	00	FC
70	00	20	20	20	20	20	20	20	20	20	20	20	20	20	00	04


*Option(PAL)

NO	ITEM	CONDITION	REMARK
		Option 1	
1	Side AV	1	0: Side AV Off
			1: Side AV On
2	SCART	1	0: SCART Off
			1: SCART On
3	PC	1	0: PC Off
			1: PC On
4	SideComp	1	0: SideComp Off
			1: SideComp On
5	16:9	1	0: Wide Off
			1: Wide On
6	200PR	0	0: 100 Program
			1: 200 Program
7	Text	1	0: Text Off
			1: Text On
8	ACMS	1	0: ACMS On
			1: ACMS Off
		Option 2	
1	HiDev	0	0: HiDev Off
			1: HiDev On
2	Hotel	0	0: Hotel Off
			1: Hotel On
3	Тор	1	0: Top Off
			1: Top On
4	III SAVE	1	O: Ch. Sound Non Memory
			1: Ch. Sound Memory
5	Turbo Vol	0	0: except below area(Off)
			1: Middle-east Area Vol On
6	Ch/Aus	0	0: except below area(Off)
			1: China, Australia On


NO	ITEM	CONDITION	REMARK
		Option 3	-
1	Language	1	0: Eng Only
			1: EU5
			2: 12 nations(Europe)
			3: Eng + Chines
			4: Eng + Arab + Urdu
			5: Eng + FARSI
2	Txt Lang	0	0: WEST EU
			1: EAST EU 1
			2: TURKY EU
			3: EAST EU 2
			4: CYRILLIC 1
			5: CYRILLIC 2
			6: CYRILLIC 3
			7: TURKY GRE 1
			8: TURKY GRE 2
			9: TURKY GRE 3
			10: ARAB FRAN
			11: ARAB ENG
			12: ARAB HEB 1
			13: ARAB HEB 2
			14: FARSI ENG
			15: FARSI FRA
			16: FARI ALL
3	Inch opt	0	reserved
4	DDCi	Analog	Analog: Analog
			Digital: Digital


SVC REMOCON


POWER	NO	KEY	FUNTION	REAMARK
POWER Key to deactivate): It should be deactivated when delivered.	1	POWER	To turn the TV on or off	
MUTE To activate the mute function. 1 P-CHECK To activate the mute function. 2 P-CHECK To check TV screen image easily. 3 S-CHECK To check TV screen image easily. 5 S-CHECK To check TV screen image easily. 5 S-CHECK To select size of the main screen (Normal, Spectacle, Wide or Zoom) 7 CAPTION Switch to closed caption broadcasting. 8 TXT To to toggle on/off the teletext mode 9 TV/AV To select an external input for the TV screen 10 TURBO SOUND To start turbo sound 11 TURBO PICTURE To enter adjustment mode when manufacturing the TV sets. 12 IN-START To enter adjustment mode when manufacturing the TV sets. 13 ADJ To enter adjustment mode when manufacturing the TV sets. 14 MPX To select the screen voltage (automatic): 15 Alter adjusting the screen - Wilk adjustment - Exit two times (Adjustment completed) 16 APC(PSM) To enter ind adjustment mode (Mono, Stereo or Foreign language) 17 ASC(SSM) To easily adjust the screen according to surrounding brightness 18 MULTIMIDIA To check component injunt 19 FRONT-AV To check component injunt 10 CH± To adjust the volume or accurately control a specific function. 10 To select the front AV 20 CH± To move channel upfdown or to select a function displayed on the screen. 21 VOL± To select the front AV 22 ENTER To set as specific function or complete setting. 23 PIP CH-(OP1) To move the channel down in the PIP screen. 24 PIP CH+(OP2) To sea as a green key in the teletext mode 25 PIP SWAP(OP3) To see as a green key in the teletext mode 26 PIP INPUT(OP4) To select the input status in the PIP screen. 27 To select the input status in the PIP screen. 28 MENU To select the input status in the PIP screen. 29 To select the input status in the PIP screen. 30 STILL Used as a flock key in the teletext mode 31 TIME Displayed the select throade Select the input status in the PIP screen. 32 To select the proton status after manufacturing the TV set. 34 MULTIPIP Used as a flock key in the teletext mode 35 SIZE Used as the size key in the teletext mode 36 Leads the	2	DOWED ON	To turn the TV on automatically if the power is supplied to the TV. (Use the	
P-CHECK To check TV screen image easily. Shortat keys		FOWER ON	,	
Social legs	3			
66 ARC To select size of the main screen (Normal, Spectacle, Wide or Zoom) Shorbox keys 7 CAPTION Switch to colosed caption broadcasting To try 8 TXT To toggle on/off the teletext mode 9 TV/AV To select an external input for the TV screen 10 TURBO SOUND To start turbo sound 11 TURBO PICTURE To start turbo picture 12 IN-START To start turbo picture 13 ADJ To enter adjustment mode when manufacturing the TV sets. 14 MPX To select the multiple sound mode (Mono, Stere or Foreign language) 15 EXIT To release the adjustment mode 16 APC(PSM) To easily adjust the screen according to surrounding brightness 17 ASC(SSM) To easily adjust the screen according to the program type 18 MULTIMIDIA To check the front AV 19 FRONT-AV To check the front AV	-			
TXT To toggle on/off the teletext mode TV/AV To select an external input for the TV screen TURBO SOUND TO START To toggle on/off the teletext mode TURBO SOUND To start turbo sound TURBO PICTURE To start turbo picture To exter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic): In-start → mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment (automatic): Abra adjusting the screen → W/B adjustment → Exit two times (Adjustment conciled) W/B adjustment (automatic): Abra adjusting the screen → W/B adjustment → Exit two times (Adjustment conciled) W/B adjustment (automatic): Abra adjustment code. To adjust horizontal line and sub-brightness. To release the adjustment mode. To adjust horizontal line and sub-brightness. To release the adjustment mode. ABC(SSM) To easily adjust sound according to surrounding brightness. To release the adjustment mode. ABC(SSM) To easily adjust sound according to surrounding brightness. To release the adjustment mode. ABC(SSM) To easily adjust sound according to the program type ABC(SSM) To easily adjust sound according to the program type To check the front AV To select the volume or accurately control a specific function. To use a specific function or complete setting. To set as a preen key in the teletext mode To see as a green key in the teletext mode To see as a green key in the teletext mode To see as a green key in the teletext mode To see as a green key in the teletext mode To set the functions such as video, voice, function or channel. T				· ·
TXT To toggle on/off the teletext mode TV/AV To select an external input for the TV screen TURBO SOUND TO start turbo sound TURBO PICTURE To adjust the screen voltage (automatic):	_		, , , , , , , , , , , , , , , , , , , ,	Shortcut keys
10 TV/AV To select an external input for the TV screen TURBO SOUND TO start turbo sound TURBO PICTURE To start turbo picture 11 TURBO PICTURE To enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic): In-start → mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment (automatic): Adter adjustment mode. To select the multiple sound mode (Mono, Stereo or Foreign language) 13 ADJ To enter into the adjustment mode. To adjust horizontal line and sub-brightness. APC(PSM) To select the multiple sound mode (Mono, Stereo or Foreign language) 15 EXIT To release the adjustment mode 16 APC(PSM) To easily adjust the screen according to surrounding brightness 17 ASC(SSM) To easily adjust the screen according to the program type 18 MULTIMIDIA To check component input Sterotal keys 19 FRONT-AV To check the front AV 20 CH± To adjust the volume or accurately control a specific function. 21 VOL± To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 PIP CH+(OP1) To move the channel down in the PIP screen. 24 PIP CH+(OP2) To set a specific function or complete setting. 25 PIP SWAP(OP3) 26 PIP INPUT(OP4) To use as a green key in the teletext mode 27 EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 30 STILL To select the functions such as video, voice, function or channel. 31 TIME Displays the teletext mode 22 Used as a holk key in the teletext mode 33 MULTI PIP Used as the index key in the reletext mode (Page updating is stopped.) 34 Displays the teletext in the normal mode used as the size key in the reletext mode (Page updating is stopped.) 35 MODE 36 PIP TO select the input status in the normal mode Used as the size key in the teletext mode (Top index wi	-			
TURBO SOUND TO start turbo sound TURBO PICTURE To start turbo picture To enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic): In-start → mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment (automatic): In-start → mute → Adjust → AV(Enter into W/B adjustment completed) W/B adjustment (automatic): In-start → mute → Adjust → AV(Enter into W/B adjustment completed) W/B adjustment (automatic): In-start → mute → Adjust → AV(Enter into W/B adjustment completed) W/B adjustment (automatic): In-start → mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment mode. To adjust horizontal line and sub-brightness. In the adjustment mode into a djust horizontal line and sub-brightness. In the adjustment mode into a djust horizontal line and sub-brightness. In the adjustment mode into adjust horizontal line and sub-brightness. In the adjustment mode into adjust horizontal line and sub-brightness. In the adjustment mode into adjust horizontal line and sub-brightness. In the adjustment mode into adjust horizontal line and sub-brightness. In the adjustment mode into adjust horizontal line and sub-brightness. In the adjustment mode into adjust horizontal line and sub-brightness. In the adjustment mode into adjust horizontal line and sub-brightness. In the adjustment mode into adjust horizontal line and sub-brightness. In the properties of the adjustment mode into adjust horizontal line and sub-brightness. In the surface into adjustment mode into adjustment mode into adjustment mode into adjust horizontal line and sub-brightness. In the line adjustment mode into adjustment mode into adjustment mode into adjustment mode into adjust horizontal line and sub-brightness. In the line adjustment mode into adjustment mode into adjust horizontal line and sub-brightness. In the line adjustment mode into adjustment mode into adjust horizontal line and sub-brightness. In the line adjustment mode into adjust horizontal line and sub-brightness. In the line adjustment mode into adj	-			
TURBO PICTURE TO enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic): In-start — mute — Adjust — AV(Enter into Wiß adjustment mode) Wiß adjustment (automatic): Alter adjusting the screen — Wiß adjustment — Exit two times (Adjustment completed) Wiß adjustment (automatic): Alter adjusting the screen — Wiß adjustment — Exit two times (Adjustment completed) Wiß adjustment (automatic): Alter adjustment — Adjust — AV(Enter into Wiß adjustment completed) Wiß adjustment — Adjust — Av(Enter into Wiß adjustment completed) Wiß adjustment — Avid adjust horizontal line and sub-brightness. To select the multiple sound mode (Mono, Stereo or Foreign language) EXIT To release the adjustment mode APC(PSM) To easily adjust the screen according to surrounding brightness To release the adjustment mode APC(PSM) To easily adjust storned according to the program type ASC(SSM) To easily adjust storned according to the program type To short theys BMULTIMIDIA To check component input To check the front AV To check the front AV To check the front AV To ocheck the fron	_		·	
To enter adjustment mode when manufacturing the TV sets. To adjust the screen voltage (automatic): In-start — mute — Adjust — AV(Enter into W/B adjustment mode) W/B adjustment (automatic): After adjusting the screen — W/B adjustment — Exit two times (Adjustment completed) W/B adjustment (automatic): After adjusting the screen — W/B adjustment — Exit two times (Adjustment completed) W/B adjustment mode. To adjust horizontal line and sub-brightness. ADJ	_			
To adjust the screen voltage (automatic):	11	TURBO PICTURE	*	
In-start → mute → Adjust → AV(Enter into W/B adjustment mode) W/B adjustment (automatic): Alter adjusting the screen → W/B adjustment — Exit two times (Adjustment completed) adjustment mode.		1	-	
W/B adjustment (automatic): After adjusting the sereen — W/B adjustment — Exit two times (Adjustment omode.) ABJ			, ,	
After adjusting the screen — AWB adjustment — Exit two times (Adjustment completed) ADJ To enter into the adjustment mode. To adjust horizontal line and sub-brightness. ADJ To select the multiple sound mode (Mono, Stere or Foreign language) EXIT To select the multiple sound mode (Mono, Stere or Foreign language) APC (PSM) To easily adjust the screen according to surrounding brightness APC (PSM) To easily adjust the screen according to the program type ASC (SSM) To easily adjust sound according to the program type MULTIMIDIA To check component input PRONT-AV To check the front AV CH ± To move channel updown or to select a function displayed on the screen. To adjust the volume or accurately control a specific function. PIP CH-(OP1) To set a specific function or complete setting. To move the channel down in the PIP screen. To use as a red key in the teletext mode To switch between the main and sub-screens To use as a green key in the teletext mode PIP SWAP(OP3) To switch between the main and sub-screens To use as a yellow key in the teletext mode PIP INPUT(OP4) To select the input status in the PIP screen To use as a blue key in the teletext mode To select the input status in the PIP screen To use as a blue key in the teletext mode To select the functions such as video, voice, function or channel. To select the functions such as video, voice, function or channel. To select the functions such as video, voice, function or channel. To select the functions such as video, voice, function or channel. To select the sub-code in the teletext mode STILL Used as a hold key in the teletext mode (Page updating is stopped.) To select the sub-code in the tenemal mode Used as the size key in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the index key in the teletext mode (Top index will be displayed if it i	12	IN-START		1 '
ADJ To enter in the adjustment mode. To adjust broizenal fine and sub-brightness. 14 MPX To select the multiple sound mode (Mono, Stereo or Foreign language) 15 EXIT To release the adjustment mode 16 APC(PSM) To easily adjust the screen according to surrounding brightness 17 ASC(SSM) To easily adjust sound according to the program type 18 MULTIMIDIA To check component input Shortcut keys 19 FRONT-AV To check the front AV Shortcut keys 19 FRONT-AV To move channel up/down or to select a function displayed on the screen. 20 CH ± To move channel up/down or to select a function displayed on the screen. 21 VOL ± To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 PIP CH-(OP1) To move the channel down in the PIP screen. 24 PIP CH+(OP2) To move the channel in the PIP screen. 25 To use as a green key in the teletext mode 26 PIP SWAP(OP3) To switch between the main and sub screens 27 To use as a yellow key in the teletext mode 28 MENU To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. 28 MENU To select the functions such as video, voice, function or channel. 29 IN-STOP To set the delivery condition status after manufacturing the TV set. 30 STILL To all the main screen in the normal mode (Page updating is stopped.) 31 TIME Displays the teletext mode (Page updating is stopped.) 32 SIZE Used as the size key in the teletext mode (Top index will be displayed if it is the top text.) 34 POSITION Used as the index key in the teletext mode (Top index will be displayed if the current page is updated.) 35 MODE Used as the update key in the teletext mode 46 PIP To adjust screen tith 47 To adjust screen tith 48 To adjust screen tith 49 To adjust screen tith 40 To adjust screen tith 40 To adjust screen tith 40 To adjust screen tith 41 To adjust screen tith 42 To adjust screen tith 43 TILL Used as the other than the current page is updated.)		1		
14 MPX To select the multiple sound mode (Mono, Stereo or Foreign language) 15 EXIT To release the adjustment mode 16 APC(PSM) To easily adjust the screen according to surrounding brightness 17 ASC(SSM) To easily adjust sound according to the program type 18 MULTIMIDIA To check component input Shortout keys 19 FRONT-AV To check the front AV Shortout keys 20 CH± To move channel up/down or to select a function displayed on the screen. 21 VOL± To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 PIP CH-(OP1) To set a specific function or complete setting. 24 PIP CH+(OP2) To switch between the main and sub screen. 25 PIP SWAP(OP3) To switch between the main and sub screens 26 PIP INPUT(OP4) To select the input status in the PIP screen 27 To use as a yellow key in the teletext mode 28 MENU To select the functions such as video, voice, function or channel. 29 IN-STOP To set the delivery condition status after manufacturing the TV set. 30 STILL Used as a hold key in the teletext mode 31 TIME Displays the teletext time in the normal mode 32 SIZE Used as the size key in the teletext mode 33 MULTI PIP Used as the index key in the teletext mode 44 POSITION Used as the position of the PIP screen in the normal mode 45 Used as the isze key in the reletext mode (Page updating is stopped.) 46 PIP TIME 47 Size Used as the index key in the teletext mode (Page updating is stopped.) 48 Displays the teletext time in the normal mode 49 Used as the size key in the PIP screen in the normal mode 40 Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) 58 MODE Used as Mode in the teletext mode 59 PIP To select the simultaneous screen 50 MODE Used as Mode in the teletext mode		·		mode.
15 EXIT To release the adjustment mode 16 APC(PSM) To easily adjust the screen according to surrounding brightness 17 ASC(SSM) To easily adjust sound according to the program type 18 MULTIMIDIA To check component input 19 FRONT-AV To check the front AV Shortcut keys 20 CH± To move channel up/down or to select a function displayed on the screen. 21 VOL± To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 PIP CH-(OP1) To move the channel down in the PIP screen. 24 PIP CH+(OP2) To move the channel down in the PIP screen. 25 PIP SWAP(OP3) To switch between the main and sub screens 26 PIP INPUT(OP4) To select the input status in the PIP screen 27 To see a spellow key in the teletext mode 28 MENU To select the input status in the PIP screen 29 IN-STOP To set the delivery condition status after manufacturing the TV set. 30 STILL To set the delivery condition status after manufacturing the TV set. 31 TIME Displays the teletext time in the normal mode 32 SIZE Used as the size key in the teletext mode 33 MULTI PIP Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) 36 MODE Used as the index key in the teletext mode 37 TILT To adjust screen tilt Shortcut keys 38 MODE 39 TILT To adjust screen tilt Shortcut keys 39 MODE 30 STILL Shortcut keys 30 SIZE Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) 31 To select the position of the PIP screen in the normal mode 34 POSITION Used as the index key in the teletext mode (Text will be displayed if the current page is updated.) 36 PIP To select the simultaneous screen			, ,	
To easily adjust the screen according to surrounding brightness			, , , , , , , , , , , , , , , , , , , ,	
17 ASC(SSM) To easily adjust sound according to the program type 18 MULTIMIDIA To check component input 19 FRONT-AV To check the front AV Shortout keys 20 CH± To move channel up/down or to select a function displayed on the screen. 21 VOL± To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 PIP CH-(OP1) To move the channel down in the PIP screen. 24 PIP CH+(OP2) To move the channel in the PIP screen. 25 PIP SWAP(OP3) To select the input status in the PIP screen 26 PIP INPUT(OP4) To select the input status in the PIP screen 27 To use as a yellow key in the teletext mode 28 MENU To select the function such as video, voice, function or channel. 29 IN-STOP To set the delivery condition status after manufacturing the TV set. 30 STILL To halt the main screen in the normal mode, or the sub screen at the PIP screen. 31 Used as a hold key in the teletext mode 32 SIZE Used as the size key in the teletext mode 33 MULTI PIP Used as the size key in the teletext mode 44 Description of the PIP screen to select the sub code in the teletext mode 55 MODE Used as the object the position of the PIP screen at the PIP screen. 66 Used as the update key in the teletext mode (Top index will be displayed if it is the top text.) 75 oselect the position of the PIP screen in the normal mode 67 Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) 86 MODE Used as Mode in the teletext mode 87 TILT To adjust screen tilt Shortout keys	-			
MULTIMIDIA To check component input Shortcut keys	_			
PRONT-AV				Ob a stand lines
20 CH± To move channel up/down or to select a function displayed on the screen. 21 VOL± To adjust the volume or accurately control a specific function. 22 ENTER To set a specific function or complete setting. 23 PIP CH-(OP1) To move the channel down in the PIP screen. 24 To move the channel down in the PIP screen. 25 To use as a green key in the teletext mode 26 PIP SWAP(OP3) To select the input status in the PIP screen 27 To select the input status in the PIP screen 28 MENU To select the functions such as video, voice, function or channel. 29 IN-STOP To sel the delivery condition status after manufacturing the TV set. 30 STILL Used as a holk key in the teletext mode 31 TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode 32 SIZE 33 MULTI PIP Used as the index key in the teletext mode 34 POSITION 55 MODE 56 Used as Mode in the teletext mode 57 To select the position of the PIP screen in the normal mode 58 MODE 59 Used as Mode in the teletext mode 59 To select the position of the PIP screen in the normal mode 60 Used as Mode in the teletext mode 61 Used as Mode in the teletext mode 62 To select the position of the PIP screen in the normal mode 63 MODE 64 Shortout keys 65 Modot Used as Mode in the teletext mode 65 Modot Used as Mode in the teletext mode 76 Shortout keys 77 TILT 77 To adjust screen tilt 78 Shortout keys 78 Shortout keys 78 Shortout keys 79 Shortout keys 79 Shortout keys 70 Shortout keys 70 Shortout keys 70 Shortout keys 71 Shortout keys	-			
To adjust the volume or accurately control a specific function.	_			
PIP CH-(OP1) To move the channel down in the PIP screen. To use as a red key in the teletext mode PIP CH+(OP2) To move the channel in the PIP screen To use as a green key in the teletext mode PIP SWAP(OP3) To switch between the main and sub screens To use as a green key in the teletext mode PIP INPUT(OP4) To switch between the main and sub screens To use as a yellow key in the teletext mode To select the input status in the PIP screen To use as a blue key in the teletext mode PIP INPUT(OP4) To select the input status in the PIP screen To use as a blue key in the teletext mode PYE PYE To select the function such as video, voice, function or channel. To select the functions such as video, voice, function or channel. PYS TO balt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) PYS TILL Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys			· · ·	
PIP CH-(OP1) To move the channel down in the PIP screen. To use as a red key in the teletext mode To move the channel in the PIP screen To use as a green key in the teletext mode To switch between the main and sub screens To use as a yellow key in the teletext mode PIP SWAP(OP3) To switch between the main and sub screens To use as a yellow key in the teletext mode To select the input status in the PIP screen To use as a blue key in the teletext mode To select the input status in the PIP screen To use as a blue key in the teletext mode EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. BEYE To select the functions such as video, voice, function or channel. To select the functions such as video, voice, function or channel. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) To lable the main screen in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shotcut keys				
PIP CH-(OP1) To use as a red key in the teletext mode To move the channel in the PIP screen To use as a green key in the teletext mode To switch between the main and sub screens To use as a yellow key in the teletext mode PIP INPUT(OP4) To select the input status in the PIP screen To use as a blue key in the teletext mode To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. IN-STOP To set the delivery condition status after manufacturing the TV set. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) TiME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys	22	ENIEK		
PIP CH+(OP2) To move the channel in the PIP screen To use as a green key in the teletext mode PIP SWAP(OP3) To switch between the main and sub screens To use as a yellow key in the teletext mode PIP INPUT(OP4) To select the input status in the PIP screen To use as a blue key in the teletext mode To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. IN-STOP To set the delivery condition status after manufacturing the TV set. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the index key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode Used as Mode in the teletext mode Shortcut keys Shortcut keys	23	PIP CH-(OP1)		
PIP CH+(OP2) To use as a green key in the teletext mode PIP SWAP(OP3) To switch between the main and sub screens To use as a yellow key in the teletext mode PIP INPUT(OP4) To select the input status in the PIP screen To use as a blue key in the teletext mode To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. PIN-STOP To set the delivery condition status after manufacturing the TV set. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode SIZE Used as the size key in the PIP screen in the normal mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys				
PIP SWAP(OP3) To switch between the main and sub screens To use as a yellow key in the teletext mode To select the input status in the PIP screen To use as a blue key in the teletext mode To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. In-stop To set the delivery condition status after manufacturing the TV set. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) Time Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys	24	PIP CH+(OP2)		
PIP SWAP(OP3) To use as a yellow key in the teletext mode PIP INPUT(OP4) To select the input status in the PIP screen To use as a blue key in the teletext mode To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. IN-STOP To set the delivery condition status after manufacturing the TV set. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shotcut keys			5 ,	
PIP INPUT(OP4) To select the input status in the PIP screen To use as a blue key in the teletext mode EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. IN-STOP To set the delivery condition status after manufacturing the TV set. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To select the simultaneous screen To adjust screen tilt Shotcut keys	25	PIP SWAP(OP3)		
To use as a blue key in the teletext mode EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. IN-STOP To set the delivery condition status after manufacturing the TV set. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To select the simultaneous screen				
EYE To set a function that will automatically adjust screen status to match the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. IN-STOP To set the delivery condition status after manufacturing the TV set. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys	26	PIP INPUT(OP4)	· ·	
the surrounding brightness so natural color can be displayed. MENU To select the functions such as video, voice, function or channel. In-stop To set the delivery condition status after manufacturing the TV set. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys				
28 MENU To select the functions such as video, voice, function or channel. 29 IN-STOP To set the delivery condition status after manufacturing the TV set. 30 STILL To halt the main screen in the normal mode, or the sub screen at the PIP screen. 30 Used as a hold key in the teletext mode (Page updating is stopped.) 31 TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode 32 SIZE Used as the size key in the PIP screen in the normal mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) 33 MULTI PIP To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) 34 POSITION Used as Mode in the teletext mode 35 MODE Used as Mode in the teletext mode 36 PIP To select the simultaneous screen 37 TILT To adjust screen tilt	27	EYE		
To set the delivery condition status after manufacturing the TV set. To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys	28	MENII		
To halt the main screen in the normal mode, or the sub screen at the PIP screen. Used as a hold key in the teletext mode (Page updating is stopped.) TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys				
Used as a hold key in the teletext mode (Page updating is stopped.) TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys			_	
TIME Displays the teletext time in the normal mode Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the size key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys	30	STILL	· ·	
TIME Enables to select the sub code in the teletext mode Used as the size key in the PIP screen in the normal mode Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys				
Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys	31	TIME		
Used as the size key in the teletext mode Used as the index key in the teletext mode (Top index will be displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys			Used as the size key in the PIP screen in the normal mode	
displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys	32	SIZE		
displayed if it is the top text.) To select the position of the PIP screen in the normal mode Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) MODE Used as Mode in the teletext mode To select the simultaneous screen To adjust screen tilt Shortcut keys	00	MUUTI DID	Used as the index key in the teletext mode (Top index will be	
34 POSITION Used as the update key in the teletext mode (Text will be displayed if the current page is updated.) 35 MODE Used as Mode in the teletext mode 36 PIP To select the simultaneous screen 37 TILT To adjust screen tilt Shortcut keys	33	MULITPIP		
displayed if the current page is updated.) 35 MODE Used as Mode in the teletext mode 36 PIP To select the simultaneous screen 37 TILT To adjust screen tilt Shortcut keys			To select the position of the PIP screen in the normal mode	
displayed if the current page is updated.) 35 MODE Used as Mode in the teletext mode 36 PIP To select the simultaneous screen 37 TILT To adjust screen tilt Shortcut keys	34	POSITION	Used as the update key in the teletext mode (Text will be	
36 PIP To select the simultaneous screen 37 TILT To adjust screen tilt Shortcut keys		_		
36 PIP To select the simultaneous screen 37 TILT To adjust screen tilt Shortcut keys	35	MODE		
37 TILT To adjust screen tilt Shortcut keys			To select the simultaneous screen	
			To adjust screen tilt	Shortcut keys
38 U~9 TO Manually Select the Charlies.	38	0~9	To manually select the channel.	

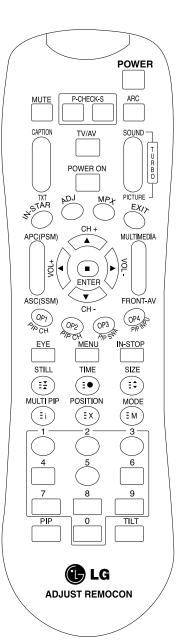



TROUBLESHOOTING

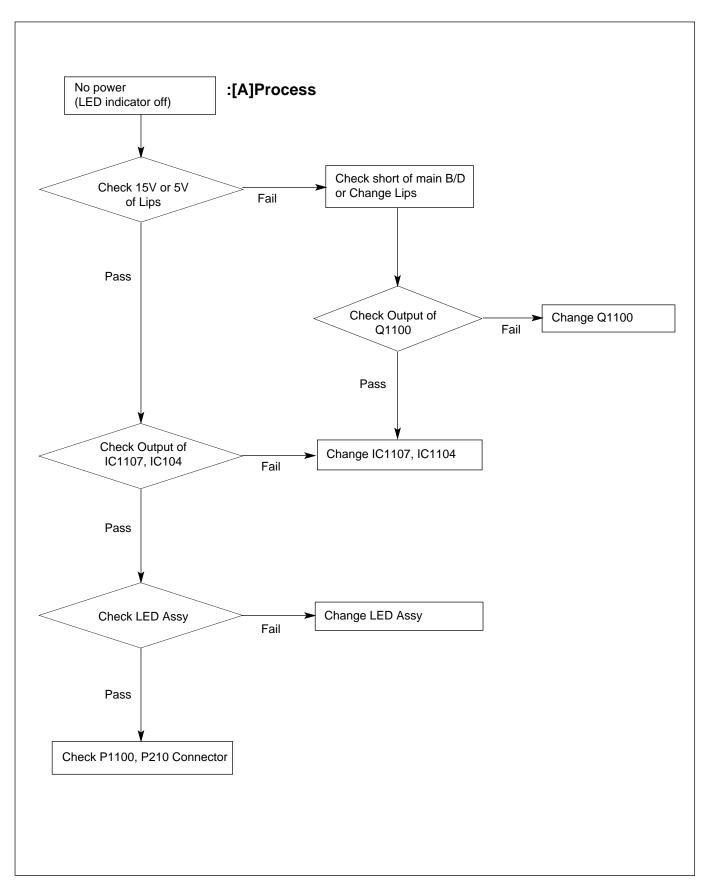

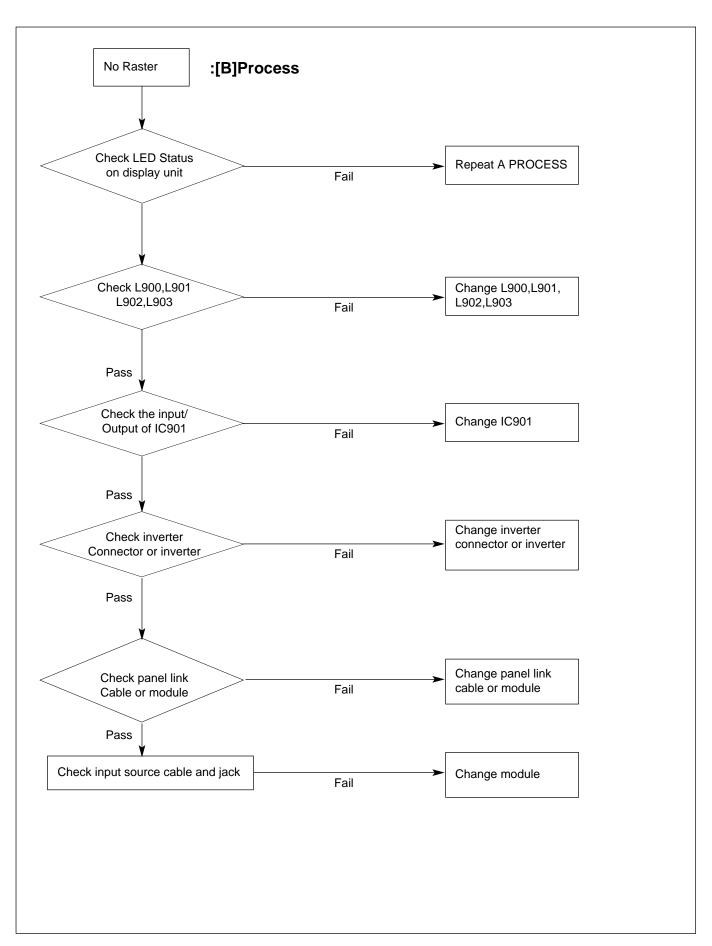


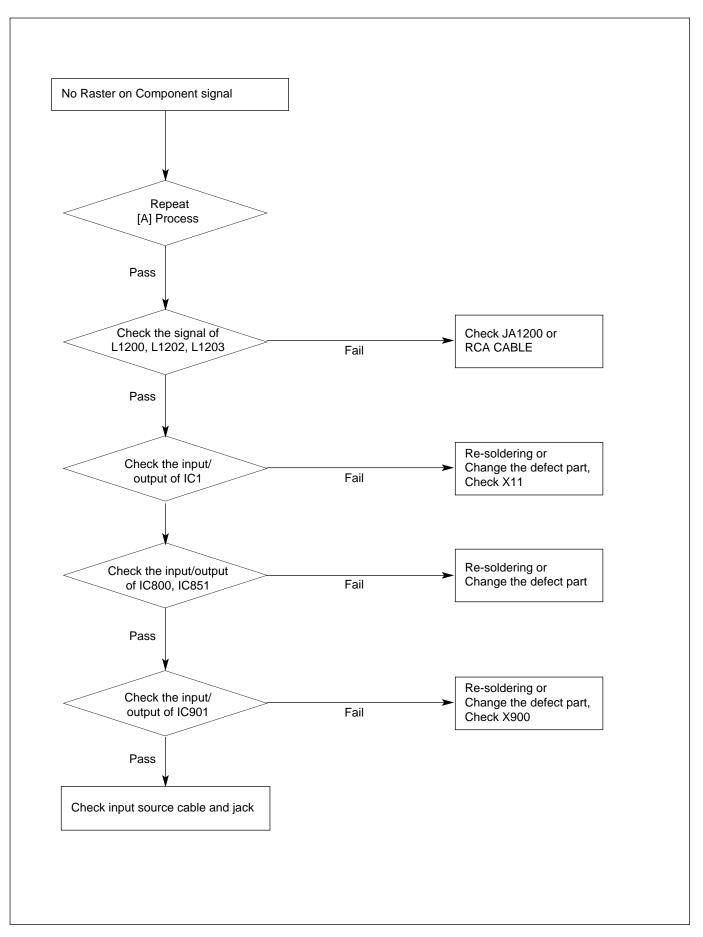

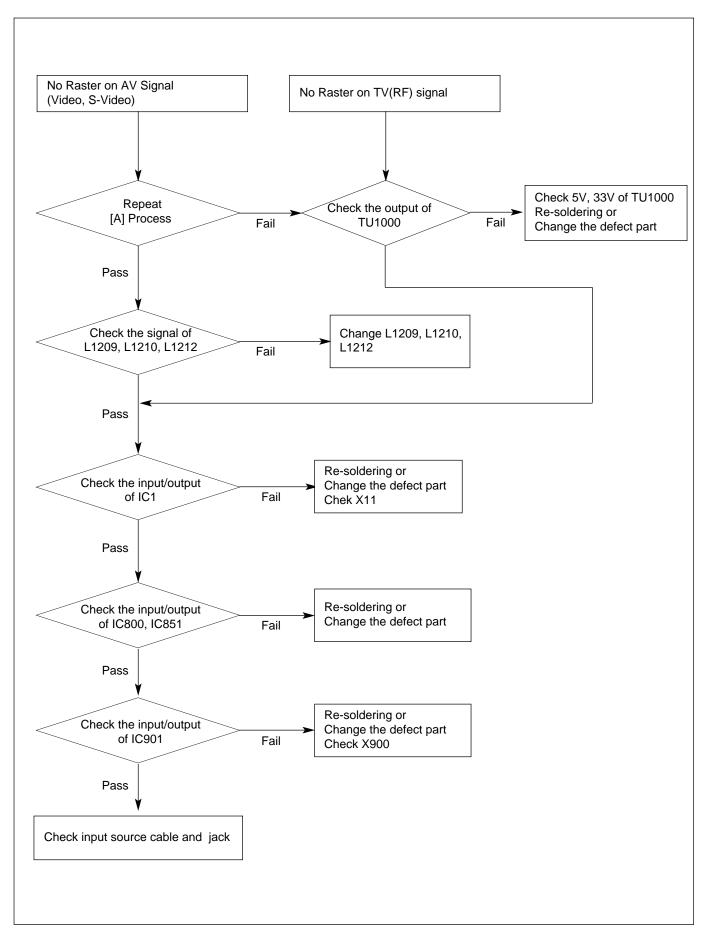

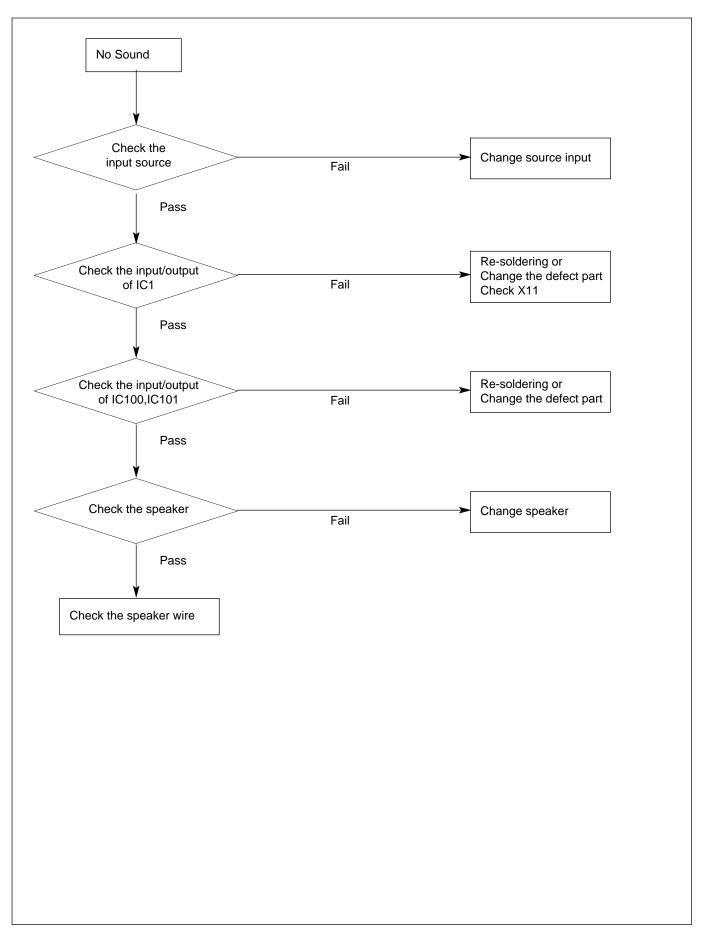

BLOCK DIAGRAM

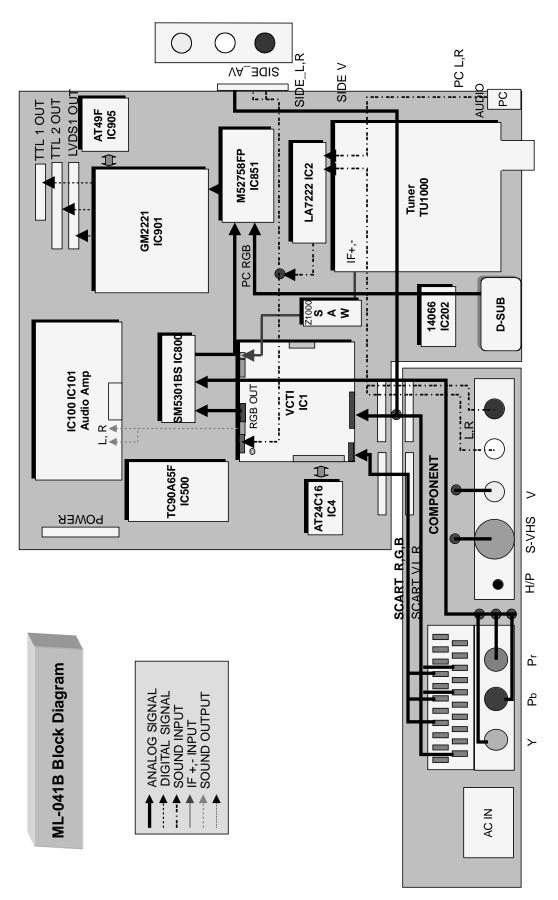

BLOCK DIAGRAM DESCRIPTION

1. Video Controller Unit & Display Data Conversion Unit

The video controller unit receives the video signals inputted through the tuner, AV port (AV1, AV2, S-Video, component), and converts them into an analog RGB signal through the microcomputer (VCTI) combined with the video decoder that integrates various functions in one chip.

Either the analog RGB, component YPbPr or PC RGB signal is selected by the switching IC and inputted to a scaler (GM2221), which is sent to the LCD module after being modified to an LVDS signal through the integrated LVDS IC.

Or, it is sent to the LCD module as a TTL output.

VCTi is the main microprocessor that handles video signal processing and sound signal processing. It also manages the RF signals received from the tuner.

The scaler can control timing to fit into the LCD panel, and can also control the size and position of the input signal.


2. Power Supply Unit


The power supply unit provides 15V and 5V DC power to the mainboard.

The PWM Step-Up DC/DC Converter circuit is used to generate the 33V used for the tuner.

15V power is directly used by the sound amplifier IC and is also used to generate 5V power through the regulator. 12V power is used for the LCD panel power, and 5V power is converted to 3.3V and 1.8V power through the regulator, which in turn supplies electrical power for ICs such as VCTI and scaler.

or 6620K00007A Wiring Part List 6631T20028G 6620K00007C 6631T11017N 6631V00040A 6631T11012R 6631T25021A 6631T20029X 6631T25019Y 6631T25019L Part No. က 2 9 ω 6 4

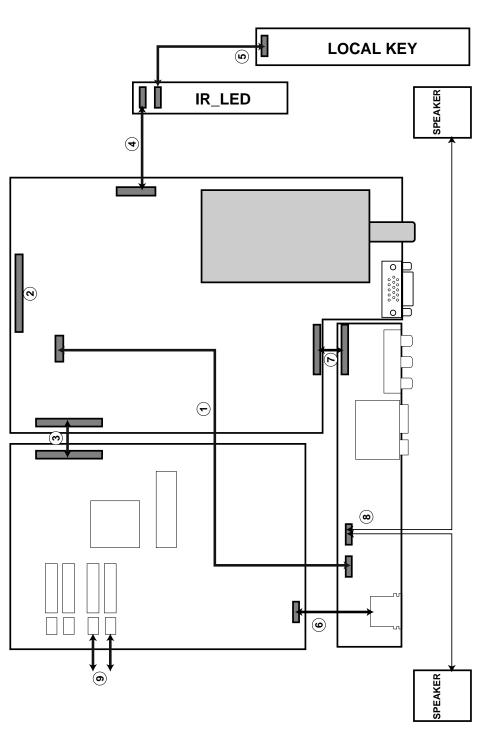

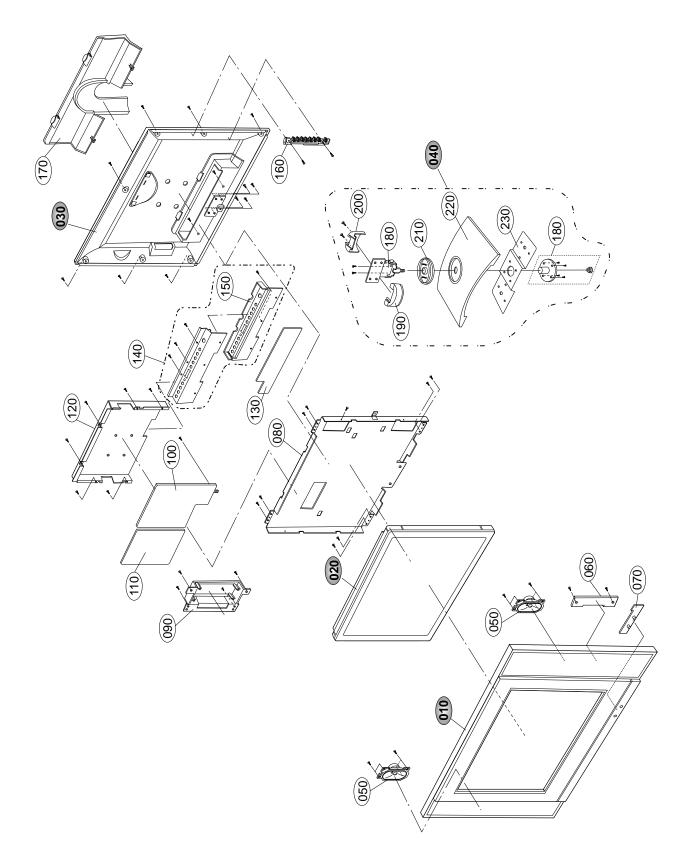

EXPLODED VIEW PARTS LIST

No.	PART NO.	DESCRIPTION	
010	3091TKB050D	CABINET ASSEMBLY, RM-15LA67 BRAND 3090V00444 CANADA	
	3091TKB050E	CABINET ASSEMBLY, RM-15LA67 BRAND 3090V00444 CANADA SKD	
020	6304FLP212A	LCD(LIQUID CRYSTAL DISPLAY), LC150X02-A4K2 LG PHILPS TFT COLOR LEAD FREE	
	6304FLP133B	LCD(LIQUID CRYSTAL DISPLAY), LC150X02-A4 LG PHILPS TFT COLOR COST COMPENSATION	
030	3809TKB029K	BACK COVER ASSEMBLY, RM-15LA67 3808V00368 CANADA	
	3809TKB029L	BACK COVER ASSEMBLY, RM-15LA67 3808V00368 CANADA SKD	
040	3043TKK174B	TILT SWIVEL ASSEMBLY, KZ-17LZ23	
050	6400GKTX01C	SPEAKER,FULLRANGE, F1527C-6428-4 K-TONE FULL-RANGE(GENERAL) 4 OHM 7/12W 85DB OTHERS 40*70MM TRACK TYPE	
060	6871TST633A	PWB(PCB) ASSEMBLY,SUB, RM-15LA66 SUB TOTAL BRAND CONTROL BOARD	
	6871TST977A	PWB(PCB) ASSEMBLY,SUB, RM/RT/RZ-15/20LA66 CONTROL BOARD CONTROL TOTAL BRAND (MAIN ML-041B) LF	
070	6871TST635A	PWB(PCB) ASSEMBLY,SUB, RM-15LA66 ML-041B SUB TOTAL BRAND IR B/D	
	6871TST969A	PWB(PCB) ASSEMBLY,SUB, RM/RT/RZ-15LA66 IR BOARD LED & P/SW TOTAL BRAND (MAIN ML-041B) LF	
080	4951TKS168A	METAL ASSEMBLY, FRAME MAIN 15LA66/70 (LPL MODULE ONLY)	
	4951TKS168B	METAL ASSEMBLY, FRAME MAIN C/SKD 15LA66/70 LPL MODULE ONLY	
090	4810V00950B	BRACKET, AV RZ-20LA62 ML024A HIPS 60HR .	
100	3313TN1008A	MAIN TOTAL ASSEMBLY, RM-15LA70(LPL) BRAND ML-041B	
110	6871TPT281E	PWB(PCB) ASSEMBLY,POWER, AUTOBAHN 15(LPL,CMO,HYDIS) & L173SAB(MFM) LPL POWER TOTAL SPI LIPS.	
	or 6871TPT281A	PWB(PCB) ASSEMBLY,POWER, RZ-15LA70 POWER TOTAL POWERNET LIPS FOR CMO/LPL/HD	
120	4950TKS300B	METAL, SHIELD 15LA66	
	4950TKS300A	METAL, SHIELD 15LA66 C/SKD	
130	6871TST561A	PWB(PCB) ASSEMBLY,SUB, RM-20LA70 ML041B SUB TOTAL BRAND JACK(DVD) BOARD ASSY	
	6871TST964A	PWB(PCB) ASSEMBLY,SUB, RM/RT-15,17,20 DVD JACK BOARD VIDEO TOTAL BRAND ML-041B LF	
140	3551TKK537D	COVER ASSEMBLY, RT-15LA66 REAR A/V PHONE ML041B	
150	4810V00925G	BRACKET, REAR AV RZ-15LA66 ML024E HIPS 407AF 70B SPRAY	
160	5020V00777C	BUTTON, CONTROL RU-15LA61 ABS, HF-380 8KEY .	
170	3550V00298B	COVER, REAR 15LA60 HIPS 60HR .	
180	4950V00157A	METAL, STAND NON HINGE ASSY_15LA60	
190	4810V00777D	BRACKET, STAND RU-15LA61 ML012C HIPS 60HR FRONT	
200	4810V00778D	BRACKET, STAND RU-15LA61 ML012C HIPS 60HR REAR	
210	4810V00776C	BRACKET, DECO RU-15LA61 ML012C ABS, HF-380 .	
220	4810V00779C	BRACKET, STAND RU-15LA61 ML012C ABS, HF-380 BASE	
230	4950V00135A	METAL, STAND NON BASE, 15LA60	

REPLACEMENT PARTS LIST

For Capacitor & Resistors, the charactors at 2nd and 3rd digit in the P/No. means as follows;

CC, CX, CK, CN, CH : Ceramic CQ : Polyestor CE : Electrolytic CF : Fixed Film

RD : Carbon Film RS : Metal Oxide Film

RN : Metal Glazed (Chip)
RH : CHIP, Metal Glazed (Chip)
RR : Drawing

				DATE: 2005. 01. 28.
*S	*AI	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		IAIN BOA		
		APACITO		
	Π			
		C1008	0CE227CF638	"220UF SHL,SD 16V M FM5 TP 5"
		C1101	0CE227BH638	220U KME 25V M FM5 TP5
		C1104	0CE227BH638	220U KME 25V M FM5 TP5
		C1107	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C1140	0CE227BH638	220U KME 25V M FM5 TP5
		C1152	0CE107BK638	100UF KME 50V M FM5 TP5
		C123	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C124	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C131	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C132	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C133	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C134	0CE477BH618	470UF KME TYPE 25V M FL TP 5
		C1150	0CH3105F946	1UF 16V Z F 2012 R/TP
		C1151	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C127	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C128	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C135	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C136	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C15	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C16	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C19	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C203	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C4	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C41	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C44	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C49	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C6	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C803	0CH3105F946	1UF 16V Z F 2012 R/TP
		C804	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C808	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C810	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C812	0CH3105F946	1UF 16V Z F 2012 R/TP
		C851	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C854	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C855	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C858	0CH3104K946	100000PF 50V Z F 2012 R/TP 100000PF 50V Z F 2012 R/TP
		C861	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C863	0CH3104K946	100000FF 50V Z F 2012 R/TP
		C865	0CH3104K946	
		C866	0CH3104K946	100000PF 50V Z F 2012 R/TP 100000PF 50V Z F 2012 R/TP
		C867	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C869	0CH3104K946	
		C871	0CH3104K946	100000PF 50V Z F 2012 R/TP 100000PF 50V Z F 2012 R/TP
		C874	0CH3104K946 0CH3104K946	100000PF 50V Z F 2012 R/TP
		C875	0CH3104K946 0CH3104K946	100000PF 50V Z F 2012 R/TP 100000PF 50V Z F 2012 R/TP
		C877 C909	0CH3104K946 0CH3104K946	100000PF 50V Z F 2012 R/TP 100000PF 50V Z F 2012 R/TP
		C909 C910	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C910 C917	0CH3104K946	100000PF 50V Z F 2012 R/TP
			0CH3104K946 0CH3104K946	100000PF 50V Z F 2012 R/TP 100000PF 50V Z F 2012 R/TP
		C920	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C925 C926	0CH3104K946 0CH3104K946	100000PF 50V Z F 2012 R/TP
		C926 C927	0CH3104K946	100000PF 50V Z F 2012 R/TP
1		0321	001101040346	100000F1 30V Z 1 ZUIZ R/IF

				DATE: 2005. 01. 28.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		C928	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C929	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C930	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C934	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C935	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C936	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C937	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C938	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C939	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C940	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C943	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C944	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C945	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C946	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C947	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C948	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C949	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C950	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C956	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C964	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C965	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C967	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C968	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C97	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C970	0CH3104K946	100000PF 50V Z F 2012 R/TP
		C13	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C14	0CH6102K406	1000PF 50V J SL 2012 R/TP
		C2	0CH6102K406	1000PF 50V J SL 2012 R/TP 1000PF 50V J SL 2012 R/TP
		C20 C21	0CH6102K406 0CH6102K406	1000PF 50V J SL 2012 R/TP
		C21	0CH6102K406	1000FF 50V J SL 2012 R/TP
		C50	0CH6102K406	1000FF 50V J SL 2012 R/TP
		C50	0CH6102K406	1000FF 50V J SL 2012 R/TP
		C59	0CH6102K406 0CH6221K416	220PF 50V J NP0 2012 R/TP
		C8	0CH6221K416	220PF 50V J NP0 2012 R/TP
		C9	0CH6221K416	220PF 50V J NP0 2012 R/TP
		C907	0CH6331K416	330PF 50V J NP0 2012 R/TP
		C923	0CH6080K116	8PF 50V D NP0 2012 R/TP
		C924	0CH6080K116	8PF 50V D NP0 2012 R/TP
		C129	181-007F	"MPE ECQ-V1H224JL3(TR), 50V 0"
		C130	181-007F	"MPE ECQ-V1H224JL3(TR), 50V 0"
		C1003	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C1003	0CH3103K516	10000F 50V 10% B(Y5P) 2012
		C1010	0CK273DK51A	27000PF 2012 50V 10% B(Y5P)
		C107	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5"
		C109	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C110	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C1108	0CK106EF56A	10UF 3216 16V 10% X7R R/TP
		C1112	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5"
		C1113	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5"
		C1114	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5"
		C113	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5"
		C900	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C902	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
				` '

	1			DATE: 2005. 01. 28.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		C1001	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C1001	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C1004	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C1005	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C11	0CK474CH94A	"0.47UF 1608 25V 80%,-20% R/T"
		C114	0CK225DFK4A	"2.2UF 2012 16V 20%,-20% F(Y5"
		C115	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C116	0CK562CK51A	5600PF 1608 50V 10% R/TP B(Y
		C117 C118	0CK562CK51A 0CK104CK56A	5600PF 1608 50V 10% R/TP B(Y 0.1UF 1608 50V 10% R/TP X7R
		C118	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C125	0CK105EK56A	1UF 3216 50V 10% X7R R/TP
		C126	0CK105EK56A	1UF 3216 50V 10% X7R R/TP
		C200	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C22	0CK822CK56A	8200PF 1608 50V 10% X7R R/TP
		C23	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C24	0CK822CK56A	8200PF 1608 50V 10% X7R R/TP
		C25	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C26	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C27	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C28 C29	0CK334CF94A 0CK104CK56A	"0.33UF 1608 16V 80%,-20% F(Y" 0.1UF 1608 50V 10% R/TP X7R
		C29	0CK104CK56A	0.1UF 1608 50V 10% R/TP X/R
		C30	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C31	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C32	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C33	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C34	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C35	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C37	0CK334CF94A	"0.33UF 1608 16V 80%,-20% F(Y"
		C40	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C42	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R 0.1UF 1608 50V 10% R/TP X7R
		C45 C52	0CK104CK56A 0CK104CK56A	0.1UF 1608 50V 10% R/TP X/R 0.1UF 1608 50V 10% R/TP X/R
		C67	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C75	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C800	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F"
		C801	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F"
		C802	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F"
		C807	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C811	0CK105CF94A	"1UF 1608 16V 80%,-20% R/TP F"
		C816	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C82 C901	0CK474CH94A 0CK103CK51A	"0.47UF 1608 25V 80%,-20% R/T" 0.01UF 1608 50V 10% R/TP B(Y
		C901	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C903	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C905	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C906	0CK103CK51A	0.01UF 1608 50V 10% R/TP B(Y
		C911	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C912	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C913	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C914	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C915	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C916 C918	0CK104CK56A 0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R 0.1UF 1608 50V 10% R/TP X7R
		C918	0CK104CK56A	0.1UF 1608 50V 10% R/TP X/R 0.1UF 1608 50V 10% R/TP X/R
		C919 C921	0CK104CK56A	0.1UF 1608 50V 10% R/TP X/R
		C922	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C961	0CK104CK56A	0.1UF 1608 50V 10% R/TP X7R
		C1015	0CH5390K416	39PF 50V 5% NP0 2012 R/TP
		C1016	0CH5390K416	39PF 50V 5% NP0 2012 R/TP
		C121	0CC100CK41A	10PF 1608 50V 5% R/TP NP0

				DATE: 2005. 01. 28.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		C122	0CC100CK41A	10PF 1608 50V 5% R/TP NP0
		C122	0CC100CK41A	100PF 1608 50V 5% R/TP NP0 1000PF 1608 50V 5% R/TP NP0
		C47	0CC220CK41A	22PF 1608 50V 5% R/TP NP0
		C48	0CC220CK41A	22PF 1608 50V 5% R/TP NP0
		C53	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C56	0CC221CK41A	220PF 1608 50V 5% R/TP NP0
		C57	0CC221CK41A	220PF 1608 50V 5% R/TP NP0
		C58	0CC221CK41A	220PF 1608 50V 5% R/TP NP0
		C74 C83	0CC102CK41A 0CC102CK41A	1000PF 1608 50V 5% R/TP NP0 1000PF 1608 50V 5% R/TP NP0
		C85	0CC102CK41A	1000FF 1608 50V 5% R/TP NP0
		C86	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C88	0CC390CK41A	39PF 1608 50V 5% R/TP NP0
		C89	0CC390CK41A	39PF 1608 50V 5% R/TP NP0
		C98	0CC102CK41A	1000PF 1608 50V 5% R/TP NP0
		C1106	0CE477BD618	470UF KME TYPE 10V 20% FL TP
		C108	0CE476VH6DC	47UF MV 25V 20% R/TP(SMD) SM
		C1100 C1102	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1102	0CE227WF6DC	220UF MVK 16V 20% R/TP(SMD) 100UF MVK 16V 20% R/TP(SMD)
		C1103	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C1109	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C111	0CE475WJ6DC	4.7UF MVK 35V 20% R/TP(SMD)
		C1118	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C112	0CE475WJ6DC	4.7UF MVK 35V 20% R/TP(SMD)
		C1124	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1130	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1132	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C1134 C1135	0CE227WF6DC	220UF MVK 16V 20% R/TP(SMD) 100UF MVK 16V 20% R/TP(SMD)
		C1135	0CE107WF6DC	1000F MVK 16V 20% R/TP(SMD) 100UF MVK 16V 20% R/TP(SMD)
		C1149	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C119	0CH8106F691	10UF 16V 20% 105STD (CYL) R/
		C120	0CH8106F691	10UF 16V 20% 105STD (CYL) R/
		C17	0CE475WJ6DC	4.7UF MVK 35V 20% R/TP(SMD)
		C5	0CE475WJ6DC	4.7UF MVK 35V 20% R/TP(SMD)
		C55	0CE475VK6DC	4.7UF MV 50V 20% R/TP(SMD) S
		C60	0CE475VK6DC	4.7UF MV 50V 20% R/TP(SMD) S 4.7UF MV 50V 20% R/TP(SMD) S
		C61 C62	0CE475VK6DC 0CE475VK6DC	4.7UF MV 50V 20% R/TP(SMD) S 4.7UF MV 50V 20% R/TP(SMD) S
		C852	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C856	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C859	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C864	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C868	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C87	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD)
		C873	0CH8476F691	47UF 16V 20% 105STD (CYL) R/
		C876	0CH8106F691	10UF 16V 20% 105STD (CYL) R/
		C888 C96	0CE107WF6DC	100UF MVK 16V 20% R/TP(SMD) 100UF MVK 16V 20% R/TP(SMD)
		C96	0CH8106F691	1000F MVK 16V 20% R/TP(SMD) 10UF 16V 20% 105STD (CYL) R/
			351101001001	
	_ D	IODEs		
		D100	0DRFC00288A	SS14 FAIR CHILD R/TP SMA 20-
		D101	0DRFC00288A	SS14 FAIR CHILD R/TP SMA 20-
		D1150	0DRGS00199A	UF4001 GENERAL SEMICONDUCTOR
		D102	0DS181009AA	KDS181 TP KEC SOT-23 80V 3
		D103	0DS181009AA	KDS181 TP KEC SOT-23 80V 3
		D107	0DS226009AA	KDS226 TP KEC SOT-23 80V 30
		ZD104	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD105	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20

				DATE: 2005. 01. 28.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		ZD200	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD209	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD201	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD202	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD203	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD204	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD205	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD206	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		ZD211	0DZ510009EE	UDZ S 5.1B TP ROHM-K SOD323
		D1151	0DZ330009DF	MTZJ33B TP ROHM-K DO34 0.5W
	IC	;		
		IC905	0IZZTSA004A	ML-041B XGA NT ATMEL 32P PLC
		IC3	0IKE702700D	"KIA7027AF 3, SOT-89 TP RESET"
		IC2	0ISA722200A	LA7222 (1280 AUDIO)
		IC200	0IMMRSG036A	"M24C02-WMN6T(P),LF SGS-THOMS"
		IC4	0IMCRAL006A	AT24C16AN-10SI-2.7 ATMEL 8P
		IC903	0IMCRAL006A	AT24C16AN-10SI-2.7 ATMEL 8P
		IC100	0IMCRMZ002A	MP7720 MONOLITHIC POWER SYST
		IC101	0IMCRMZ002A	MP7720 MONOLITHIC POWER SYST
		IC851	0IMCRMI006A	"M52758FP MITSUBISHI 36PIN, R"
		IC1	0IPRPMN003C	VCT49XYF C7(NTSC+PAL) MICRON
		IC800	0IPRPNP001A	"SM5301BS(ATSC DTV) NPC 28P,H"
		IC901	0IPRPGN015C	"GM2221-BC-LF,PB FREE GENESIS"
		IC1101	0IPMGFA061A	"FAN1587AD33X FAIRCHILD 3P,DP"
		IC1103	0IPMGSG018D	"LD1086DT18TR SGS-THOMSON 3P,"
		IC1108	0IMCRKE010A	KIA7812AF KEC 2P DPACK R/TP
		IC1110	0IPMG00003A	"KIA78M08F KEC 3P,DPAK R/TP 8"
		IC1110	0ISS780800J	"KA78M08R 3P,D-PAK TP VOL. RE"
		IC1111	0IPMG00004A	"KIA7805AF KEC 3P,DPAK R/TP 5"
		IC1111	0IMCRFA015A	KA7805R FAIRCHILD 2P D-PAK R
		IC1113	0IPMG00003A	"KIA78M08F KEC 3P,DPAK R/TP 8"
		IC1113	0ISS780800J	"KA78M08R 3P,D-PAK TP VOL. RE"
		IC1105	0IPMGFA061A	"FAN1587AD33X FAIRCHILD 3P,DP"
		IC1106	0IPMGSG018D	"LD1086DT18TR SGS-THOMSON 3P,"
		IC1114	0IPMGFA061A	"FAN1587AD33X FAIRCHILD 3P,DP"
		IC1115	0IPMGFA061A	"FAN1587AD33X FAIRCHILD 3P,DP"
		IC202	0IMO140662A	"MC14066BDR2 14P,SOIC TP BILA"
	C	OIL & CC	ORE & INDUCTO	DR .
		J.L & 30		
		L104	6140TBZ045A	"38.5UH(DIP), 6A, P7.5, DR8.3"
		L105	6140TBZ045A	"38.5UH(DIP), 6A, P7.5, DR8.3"
		L1150	150-985B	DR8*11 2.4MH 0.16MM 270.5T
		L1100	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L1101	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L1103	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1105	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L1106	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L1107	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L200	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L201	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L202	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L203	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L204	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L853	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L900	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L901	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L902	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L903	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L905	6210TCE001A	HB-1S2012-080JT CERATEC 2012
	<u> </u>			

*0	* ^ !	1.00.110	DARTNO	DATE: 2005. 01. 28.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		14400	6240TCF004C	LILLAMOOAS FOA OFDATEC OOASMA
		L1102	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L205	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L800	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L906	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L907	6210TCE001G	HH-1M3216-501 CERATEC 3216MM
		L10	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-
		L1001	0LC1020101A	1UH 10% 2012 R/TC FI-B2012-1
		L1002	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-
		L15	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-
		L2	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-
		L8	0LC1032101A	10UH 10% 3216 R/TC FI-C3216-
	F	ET & TRA	ANSISTOR	
		IC1107	0TF492509AA	SI4925DY TP TEMIC 30V 6.1A
		Q1150	0TR322809AB	KTC3228-Y(KTC2383) TP KEC TO
		Q1	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q603	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q900	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q100	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q1000	0TR388109AA	KTC3881 CHIP TP KEC
		Q101	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC -
		Q1100	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q1151	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		Q12	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC -
		Q13	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC -
		Q14	0TR150400BA	CHIP 2SA1504S(ASY) BK KEC -
		Q15	0TR387500AA	CHIP 2SC3875S(ALY) BK KEC -
		IC902	0TFVI80005A	VISHAY SI4963DY R/TP SO-8 -2
		IC1104	0TFVI80005A	VISHAY SI4963DY R/TP SO-8 -2
	L_			VIOLAT 014903DT IVII 30-0-2
	R	ESISTOF	Rs I	
		14404	0D112202D622	22K 4/40W 5 D D/TD
		L1104	0RH2202D622	22K 1/10W 5 D.R/TP
		R1004	0RH3000D622	300 1/10W 5 D.R/TP
		R1010	0RH7501D622	7.5K 1/10W 5 D.R/TP
		R1012	0RH7502D622	75K 1/10W 5 D.R/TP
		R106	0RH1500D622	150 1/10W 5 D.R/TP
		R107	0RH1003D622	100K 1/10W 5 D.R/TP
		R1108	0RH1003D622	100K 1/10W 5 D.R/TP
		R1109	0RH1003D622	100K 1/10W 5 D.R/TP
		R1151	0RH4700D622	470 1/10W 5 D.R/TP
		R1153	0RH1000D622	100 1/10W 5 D.R/TP
		R126	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R132	0RH1003D622	100K 1/10W 5 D.R/TP
		R133	0RH1003D622	100K 1/10W 5 D.R/TP
		R134	0RH1003D622	100K 1/10W 5 D.R/TP
		R135	0RH1003D622	100K 1/10W 5 D.R/TP
		R14	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R140	0RH0392D622	39 1/10W 5 D.R/TP
		R141	0RH0392D622	39 1/10W 5 D.R/TP
		R142	0RH0392D622	39 1/10W 5 D.R/TP
		R143	0RH0392D622	39 1/10W 5 D.R/TP
		R144	0RH0392D622	39 1/10W 5 D.R/TP
		R145	0RH0392D622	39 1/10W 5 D.R/TP
		R146	0RH0392D622	39 1/10W 5 D.R/TP
		R147	0RH0392D622	39 1/10W 5 D.R/TP
		R211	0RH0752D622	75 1/10W 5 D.R/TP
		R212	0RH0752D622	75 1/10W 5 D.R/TP
		R213	0RH0752D622	75 1/10W 5 D.R/TP
		R214	0RH4703D622	470K 1/10W 5 D.R/TP
	1			
		R215	0RH3901D622	3.9K 1/10W 5 D.R/TP


				DATE: 2005. 01. 28.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		D216	0PH2001D622	3 0K 1/10W 5 D B/TD
		R216 R217	0RH3901D622 0RH4703D622	3.9K 1/10W 5 D.R/TP 470K 1/10W 5 D.R/TP
		R57	0RH1000D622	100 1/10W 5 D.R/TP
		R59	0RH1201D622	1.2K 1/10W 5 D.R/TP
		R6	0RH4702D622	47K 1/10W 5 D.R/TP
		R74	0RH1000D622	100 1/10W 5 D.R/TP
		R818	0RH8200D622	820 1/10W 5 D.R/TP
		R9	0RH4701D622	4.7K 1/10W 5 D.R/TP
		R908	0RH0822D622	82 1/10W 5 D.R/TP
		R910	0RH0822D622	82 1/10W 5 D.R/TP
		R915	0RH3600D622	CHIP 360-J 1/10 W
		R920	0RH2200D622	220 1/10W 5 D.R/TP
		R934	0RH1000D622	100 1/10W 5 D.R/TP
		R989	0RH8200D622	820 1/10W 5 D.R/TP
		R999	0RH1000D622	100 1/10W 5 D.R/TP
		R1149 R136	0RH2200D622 0RH8202D622	220 1/10W 5 D.R/TP 82K 1/10W 5 D.R/TP
		R136	0RH8202D622 0RH8202D622	82K 1/10W 5 D.R/TP 82K 1/10W 5 D.R/TP
		C931	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		C932	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R1002	0RH1501D622	1.5K OHM 1 / 10 W 2012 5.00%
		R1011	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R1106	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R1152	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R1155	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R12	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R128	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R129	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R13	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R148	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R149	0RH0000D622 0RH0222D622	0 OHM 1 / 10 W 2012 5.00% D 22 OHM 1 / 10 W 2012 5.00% D
		R202 R208	0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D
		R209	0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D
		R210	0RH0222D622	22 OHM 1 / 10 W 2012 5.00% D
		R36	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R817	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R822	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R903	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R918	0RH1001D622	1K OHM 1 / 10 W 2012 5.00% D
		R961	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R964	0RH1002D622	10K OHM 1 / 10 W 2012 5.00%
		R985	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R995	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R10	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R1001 R1003	0RJ0562D677 0RJ8200D677	56 OHM 1/10 W 5% 1608 R/TP 820 OHM 1/10 W 5% 1608 R/TP
		R1003	0RJ8200D677 0RJ0682D677	68 OHM 1/10 W 5% 1608 R/TP
		R1003	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R11	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R1105	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R1107	0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R1150	0RJ0102D677	10 OHM 1/10 W 5% 1608 R/TP
		R124	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R125	0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R127	0RJ2701D677	2.7K OHM 1/10 W 5% 1608 R/TP
		R130	0RJ1202D677	12K OHM 1/10 W 5% 1608 R/TP
		R131	0RJ1202D677	12K OHM 1/10 W 5% 1608 R/TP
		R138	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R139	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R15	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R16	0RJ2200D677	220 OHM 1/10 W 5% 1608 R/TP


*0	* ^ 1	LOC NO	DARTNO	DATE: 2005. 01. 28.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		R17	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R18	0RJ2200D677	220 OHM 1/10 W 5% 1608 R/TP
		R19	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R20	0RJ2200D677	220 OHM 1/10 W 5% 1608 R/TP
		R203	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R205	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R206	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R207	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R21	0RJ0222D677	22 OHM 1/10 W 5% 1608 R/TP
		R218	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP 10K OHM 1/10 W 5% 1608 R/TP
		R219 R22	0RJ1002D677 0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R220	0RJ7502D677	75K OHM 1/10 W 5% 1608 R/TP
		R221	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R224	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R225	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R226	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R227	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R229	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R23	0RJ2701D677	2.7K OHM 1/10 W 5% 1608 R/TP
		R230	0RJ7502D677	75K OHM 1/10 W 5% 1608 R/TP
		R24	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R240	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R25 R28	0RJ1000D677 0RJ0000D677	100 OHM 1/10 W 5% 1608 R/TP 0 OHM 1/10 W 5% 1608 R/TP
		R29	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R34	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R41	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R45	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R46	0RJ1001D677	1K OHM 1/10 W 5% 1608 R/TP
		R50	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R51	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R52	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R53	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP
		R54	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R55	0RJ1500D677	150 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
		R56 R58	0RJ1000D677 0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R60	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R62	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R64	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R66	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R68	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R69	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R70	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R72	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R73	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R75 R76	0RJ1000D677 0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
		R77	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP 100 OHM 1/10 W 5% 1608 R/TP
		R78	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R80	0RJ2202D677	22K OHM 1/10 W 5% 1608 R/TP
		R835	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R838	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R901	0RJ0472D677	47 OHM 1/10 W 5% 1608 R/TP
		R902	0RJ0472D677	47 OHM 1/10 W 5% 1608 R/TP
		R904	0RJ0472D677	47 OHM 1/10 W 5% 1608 R/TP
		R907	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R909	0RJ0822D677	82 OHM 1/10 W 5% 1608 R/TP
		R911	0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R912 R913	0RJ1000D677 0RJ0000D677	100 OHM 1/10 W 5% 1608 R/TP 0 OHM 1/10 W 5% 1608 R/TP
	1	1/219	ו וטעטטטטטטווט	0 OT 1101 1/10 W 0/0 1000 R/1F


				DATE: 2005. 01. 28.
*S	*Δ1	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
3	AL	LOC. NO.	FARTINO.	DESCRIFTION/ SPECIFICATION
		R914	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
			0RJ0000D677	
		R917		0 OHM 1/10 W 5% 1608 R/TP
		R928	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R929	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R930	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R931	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R932	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R935	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R936	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R938	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R939	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R941	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R942	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R943	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R944	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R945	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R946	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R947	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R950	0RJ0000D677	0 OHM 1/10 W 5% 1608 R/TP
		R950 R951	0RJ4701D677	4.7K OHM 1/10 W 5% 1608 R/TP
		R953	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R954	0RJ1002D677	10K OHM 1/10 W 5% 1608 R/TP
		R96	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R979	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R980	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R981	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R982	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R983	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R984	0RJ1000D677	100 OHM 1/10 W 5% 1608 R/TP
		R991	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
		R992	0RJ3301D677	3.3K OHM 1/10 W 5% 1608 R/TP
	0	THERs		
		Z1000	6200QL3002F	"X6966M EPCOS ST SIP5K, 6200Q"
		JA201	6612VCH003B	PEJ012C PARK ELEC H=6.5 STER
		X11	6202TST003C	HC-49/SM5H KONY CHIP 20.25MH
		X900	6202VDT002B	SX-1 SUNNY SC14.3MHZ +/- 30
		IC905	6620F00017A	CCSD-32T-SM WOOYOUNG 32P PLC
		TU1000	6700VS0003D	TAEW-G052P LGIT MULTI VS RCA
	С	ONTROL	BOARD	
		R2200	0RN1101F409	1.10K 1/6W 1% TA52
		R2201	0RN8200F409	820 1/6W 1% TA52
		R2202	0RN5600F409	560 1/6W 1% TA52
		R2203	0RN4700F409	470 1/6W 1 TA52
		R2204	0RN3900F409	390 1/6W 1% TA52
		R2205	0RN3300F409	330 1/6W 1% TA52
		R2206	0RN2700F409	270 1/6W 1% TA52
		R2207	0RN3301F409	3.30K 1/6W 1% TA52
		R2208	0RN2000F409	200 1/6W 1% TA52
			140-313A	TACT 2LEAD 100G(TA) LG C&D N
			140-313B	TACT 2LEAD 160G(TA) LG C&D N
			140-313A	TACT 2LEAD 100G(TA) LG C&D N
				* *
		CIVIOCO	140-3138	TACT 2LEAD 160G(TA) LG C&D N
		SW2201	4.40.040.4	TAOT 01 EAD 4000/TAV 1 O 000 N
		SW2202	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2202 SW2202	140-313B	TACT 2LEAD 160G(TA) LG C&D N
		SW2202 SW2202 SW2203	140-313B 140-313A	TACT 2LEAD 160G(TA) LG C&D N TACT 2LEAD 100G(TA) LG C&D N
		SW2202 SW2202 SW2203 SW2203	140-313B 140-313A 140-313B	TACT 2LEAD 160G(TA) LG C&D N TACT 2LEAD 100G(TA) LG C&D N TACT 2LEAD 160G(TA) LG C&D N
		SW2202 SW2202 SW2203 SW2203	140-313B 140-313A	TACT 2LEAD 160G(TA) LG C&D N TACT 2LEAD 100G(TA) LG C&D N
		SW2202 SW2202 SW2203 SW2203	140-313B 140-313A 140-313B	TACT 2LEAD 160G(TA) LG C&D N TACT 2LEAD 100G(TA) LG C&D N TACT 2LEAD 160G(TA) LG C&D N


				DATE: 2005. 01. 28.
*S	*AL	LOC. NO.	PART NO.	DESCRIPTION / SPECIFICATION
		SW2204	140-313B	TACT 2LEAD 160G(TA) LG C&D N
		SW2205	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2205	140-313B	TACT 2LEAD 160G(TA) LG C&D N
		SW2206	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2206	140-313B	TACT 2LEAD 160G(TA) LG C&D N
		SW2207	140-313A	TACT 2LEAD 100G(TA) LG C&D N
		SW2207	140-313B	TACT 2LEAD 160G(TA) LG C&D N
		10175		
	J.	ACK BOA	ARD	
		C1215	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C1216	0CH3103K516	10000PF 50V 10% B(Y5P) 2012
		C1221	0CH6331K416	330PF 50V J NP0 2012 R/TP
		C1223	0CH6471K416	470F 50V J NP0 2012 R/TP
		C1224 L1200	0CH6471K416 0RH0752D622	470F 50V J NP0 2012 R/TP 75 1/10W 5 D.R/TP
		L1200	0RH0752D622 0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		L1202	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D 0 OHM 1 / 10 W 2012 5.00% D
		L1203	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1200	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1207	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1206	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1211	0LC0233002A	3.3UH CERATECH R/TP
		L1213	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		L1214	6210TCE001A	HB-1S2012-0000T CERATEC 2012
		L1215	6210TCE001A	HB-1S2012-080JT CERATEC 2012
		R1201	0RH0000D622	0 OHM 1 / 10 W 2012 5.00% D
		R1202	0RH0752D622	75 1/10W 5 D.R/TP
		R1217	0RH0752D622	75 1/10W 5 D.R/TP
		R1218	0RH0752D622	75 1/10W 5 D.R/TP
		R1219	0RH0752D622	75 1/10W 5 D.R/TP
		R1220	0RH0752D622	75 1/10W 5 D.R/TP
		R1224	0RJ1000H680	100 OHM 1/2 W 5% 5025 R/TP
		R1225	0RJ1000H680	100 OHM 1/2 W 5% 5025 R/TP
		R1230	0RH0752D622	75 1/10W 5 D.R/TP
		R1231	0RH0752D622	75 1/10W 5 D.R/TP
		R1232	0RH5101D622	5.1K 1/10W 5 D.R/TP
		R1233	0RH4703D622	470K 1/10W 5 D.R/TP
		R1234	0RH5101D622	5.1K 1/10W 5 D.R/TP
		R1235	0RH4703D622	470K 1/10W 5 D.R/TP
		ZD1200	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD1206		UDZ S 6.2B TP ROHM SOD323 20
		ZD1207		UDZ S 6.2B TP ROHM SOD323 20
		ZD1212	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD1213	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD1214	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		JA1200	6612VJH008D	PJ6063D PARKELEC DVD IN 3P G
		JA1201 C1217	6613V00008F 0CH3104K946	PMJ014F PARK ELEC E/P(ST)+S- 100000PF 50V Z F 2012 R/TP
		C1217	0CH3104K946 0CH6331K416	330PF 50V J NP0 2012 R/TP
		C1218	0CH6331K416	330PF 50V J NP0 2012 R/TP
		C1219	0CH6331K416	330PF 50V J NP0 2012 R/TP
		L1209	0LC0233002A	3.3UH CERATECH R/TP
		L1210	0LC0233002A	3.3UH CERATECH R/TP
		R1226	0RH0472D622	47 1/10W 5 D.R/TP
		R1227	0RH0752D622	75 1/10W 5 D.R/TP
		R1228	0RH0752D622	75 1/10W 5 D.R/TP
		R1229	0RH0752D622	75 1/10W 5 D.R/TP
		ZD1210	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20
		ZD1211	0DZ620009HB	UDZ S 6.2B TP ROHM SOD323 20


C2101 OCH3104K566 L2101 6210TCE001A Q2101 OTR387500AA Q2102 OTR387500AA Q2103 OTR387500AA R2101 ORH1000D622 R2104 ORH1001D622 R2105 ORH1001D622 R2106 ORH1000D622 R2111 DRH4301D622 ASK 1/10W 5 TA SAM5670(DL-2LRG) BK Y-GREEN TSOP4838SO1 VISHAY 38.0KHZ L
C2101
C2101 0CH3104K566 0.1UF 50V 10% X7R 2012 R/TP L2101 6210TCE001A HB-1S2012-080JT CERATEC 2012 C2101 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - Q2102 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - Q2103 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - R2101 0RH1000D622 100 1/10W 5 D.R/TP R2102 0RH1000D622 100 1/10W 5 D.R/TP R2103 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2104 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2105 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2106 0RH100D622 100 1/10W 5 D.R/TP R2111 0RH4301D622 4.3K 1/10W 5 TA LED1 0DL200000CA SAM5670(DL-2LRG) BK Y-GREEN
L2101 6210TCE001A HB-1S2012-080JT CERATEC 2012 Q2101 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - Q2102 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - Q2103 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - R2101 0RH1000D622 100 1/10W 5 D.R/TP R2102 0RH1000D622 100 1/10W 5 D.R/TP R2103 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2104 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2105 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2106 0RH100D622 100 1/10W 5 D.R/TP R2111 0RH4301D622 4.3K 1/10W 5 TA LED1 0DL200000CA SAM5670(DL-2LRG) BK Y-GREEN
Q2101 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - Q2102 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - Q2103 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - R2101 0RH1000D622 100 1/10W 5 D.R/TP R2102 0RH1000D622 100 1/10W 5 D.R/TP R2103 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2104 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2105 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2106 0RH100D622 1K OHM 1 / 10 W 2012 5.00% D R2106 0RH100D622 100 1/10W 5 D.R/TP R2111 0RH4301D622 4.3K 1/10W 5 TA LED1 0DL200000CA SAM5670(DL-2LRG) BK Y-GREEN
Q2102 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - Q2103 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - R2101 0RH1000D622 100 1/10W 5 D.R/TP R2102 0RH1000D622 100 1/10W 5 D.R/TP R2103 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2104 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2105 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2106 0RH1000D622 1K OHM 1 / 10 W 2012 5.00% D R2111 0RH4301D622 4.3K 1/10W 5 D.R/TP R2111 0RH4301D622 4.3K 1/10W 5 TA LED1 0DL200000CA SAM5670(DL-2LRG) BK Y-GREEN
Q2103 0TR387500AA CHIP 2SC3875S(ALY) BK KEC - R2101 0RH1000D622 100 1/10W 5 D.R/TP R2102 0RH1000D622 100 1/10W 5 D.R/TP R2103 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2104 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2105 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2106 0RH1000D622 1K OHM 1 / 10 W 2012 5.00% D R2111 0RH4301D622 4.3K 1/10W 5 D.R/TP R2111 0RH4301D622 4.3K 1/10W 5 TA LED1 0DL200000CA SAM5670(DL-2LRG) BK Y-GREEN
R2101
R2103
R2104 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2105 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2106 0RH1000D622 100 1/10W 5 D.R/TP R2111 0RH4301D622 4.3K 1/10W 5 TA LED1 0DL200000CA SAM5670(DL-2LRG) BK Y-GREEN
R2105 0RH1001D622 1K OHM 1 / 10 W 2012 5.00% D R2106 0RH1000D622 100 1/10W 5 D.R/TP R2111 0RH4301D622 4.3K 1/10W 5 TA LED1 0DL200000CA SAM5670(DL-2LRG) BK Y-GREEN
R2106 0RH1000D622 100 1/10W 5 D.R/TP R2111 0RH4301D622 4.3K 1/10W 5 TA LED1 0DL200000CA SAM5670(DL-2LRG) BK Y-GREEN

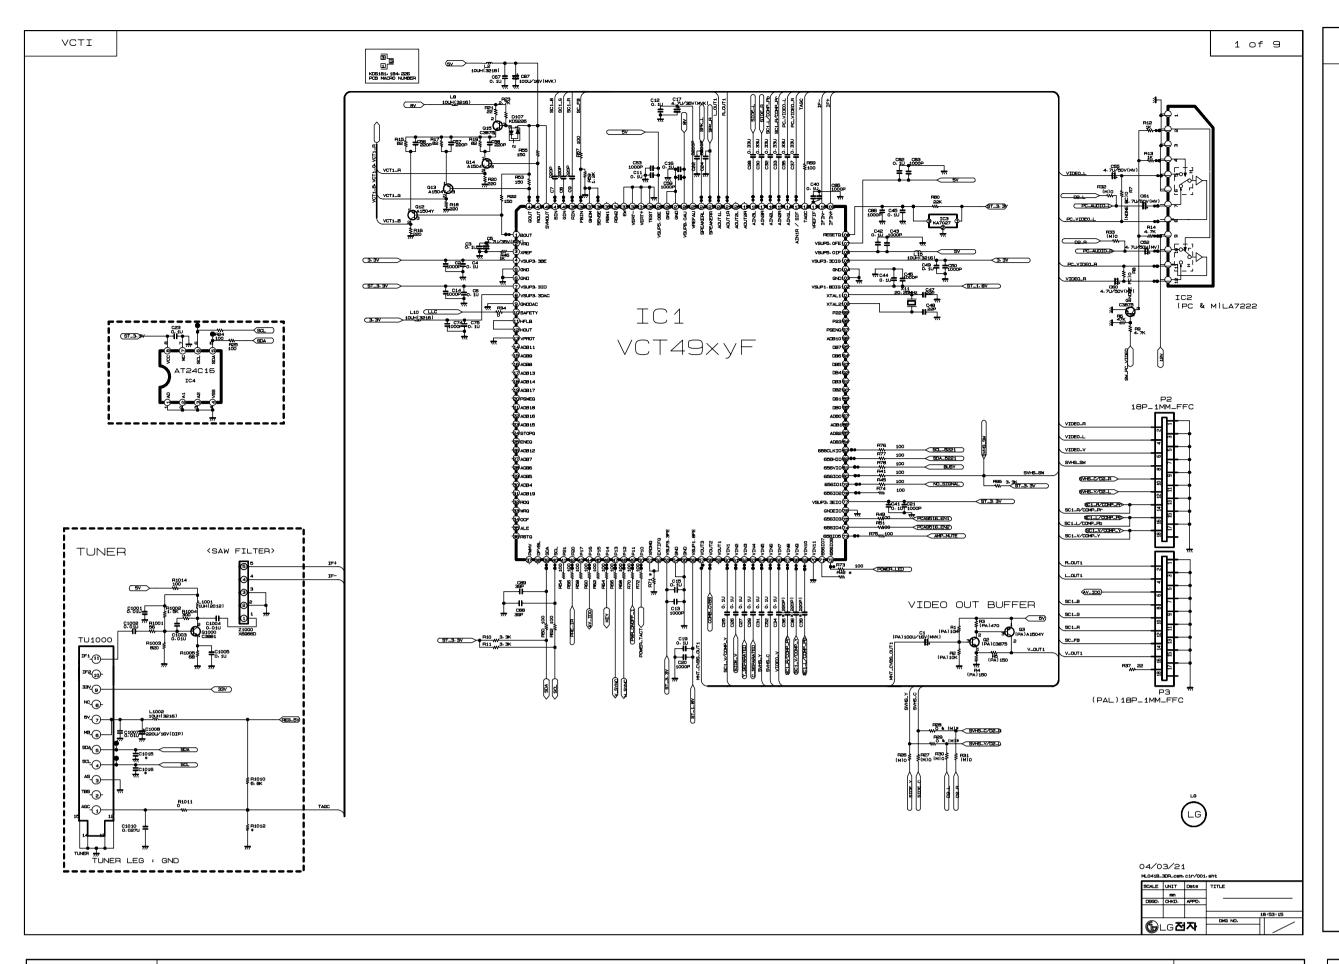


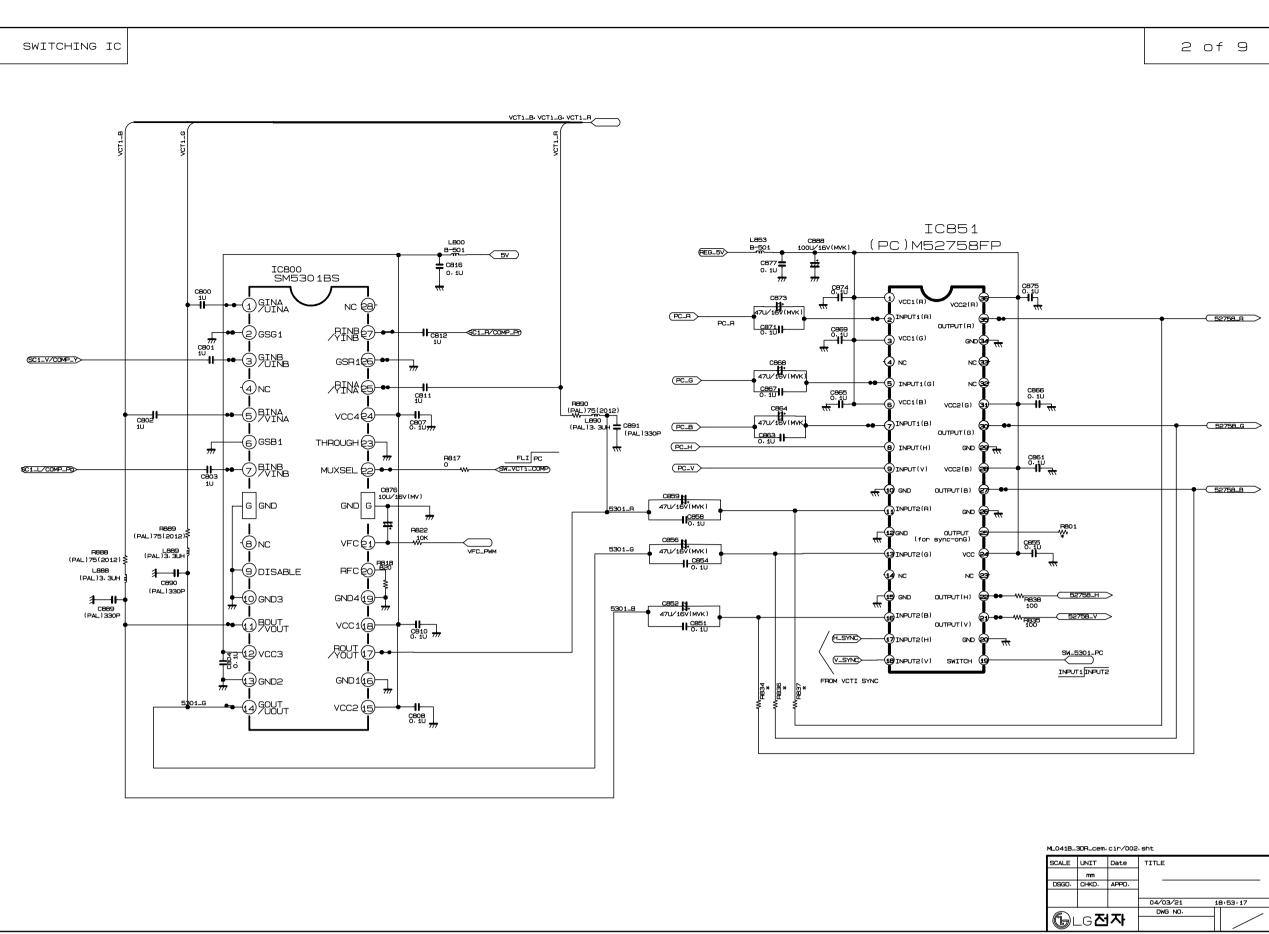


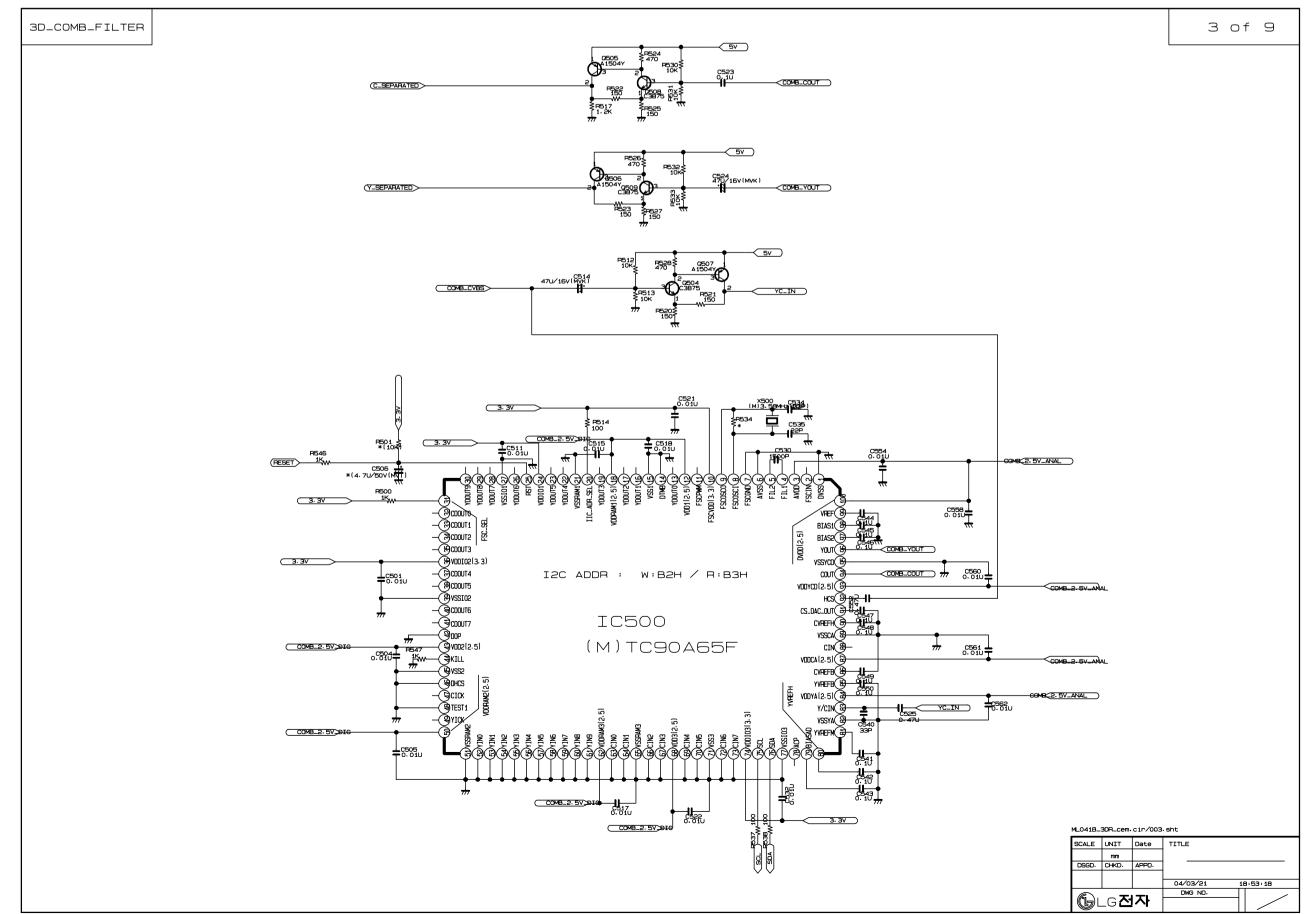


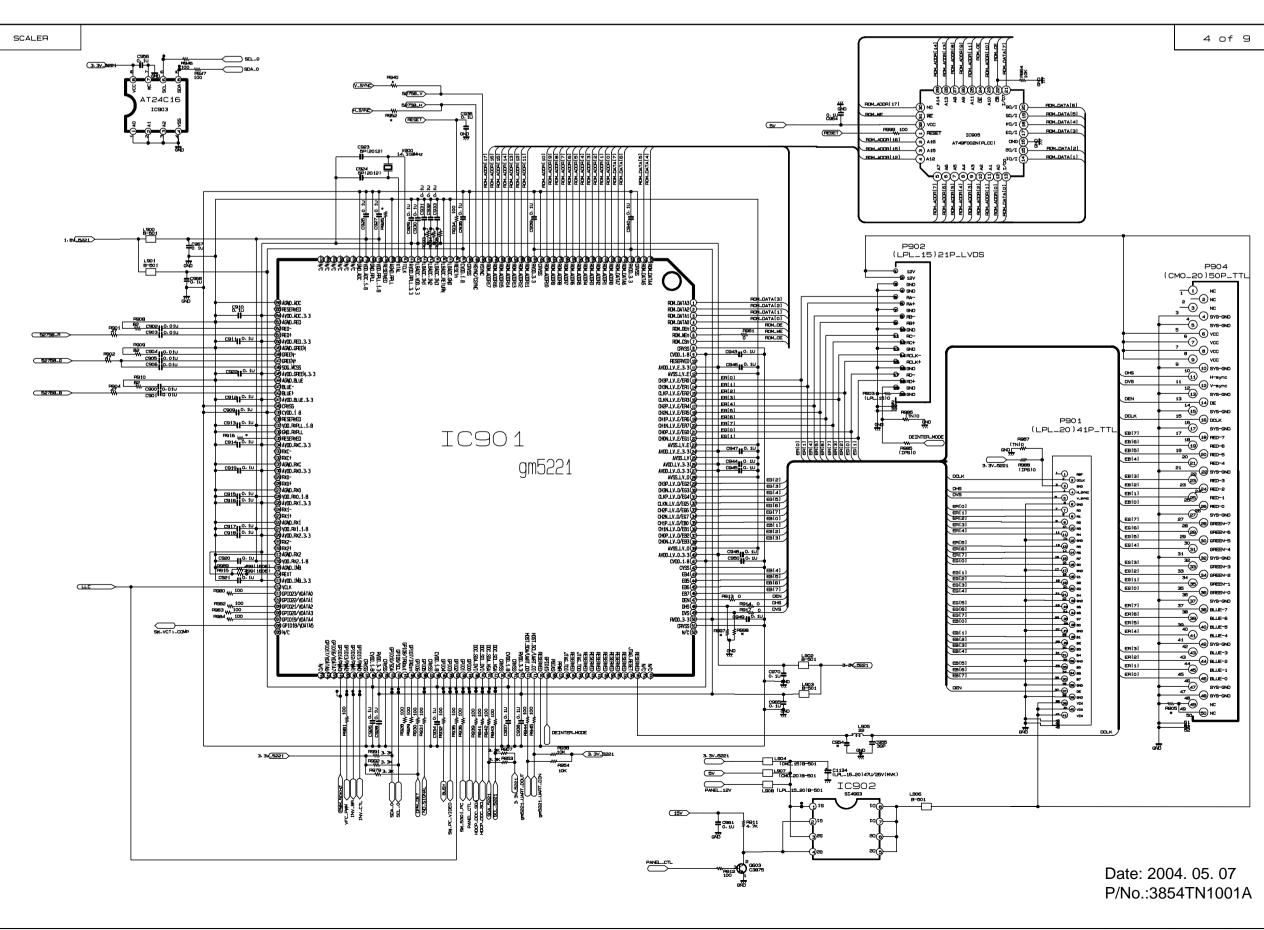

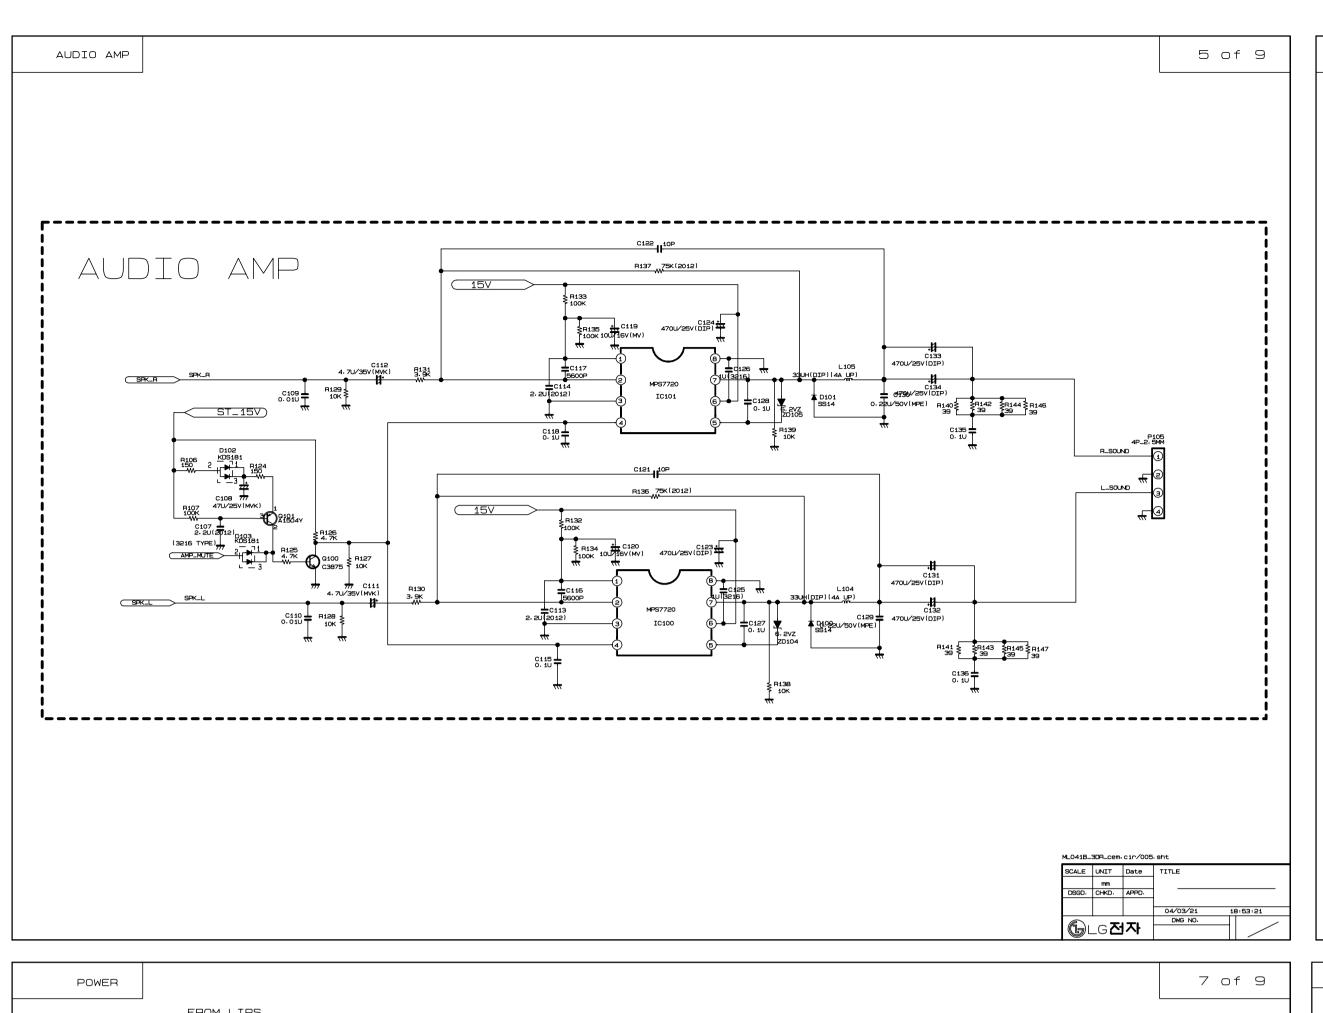

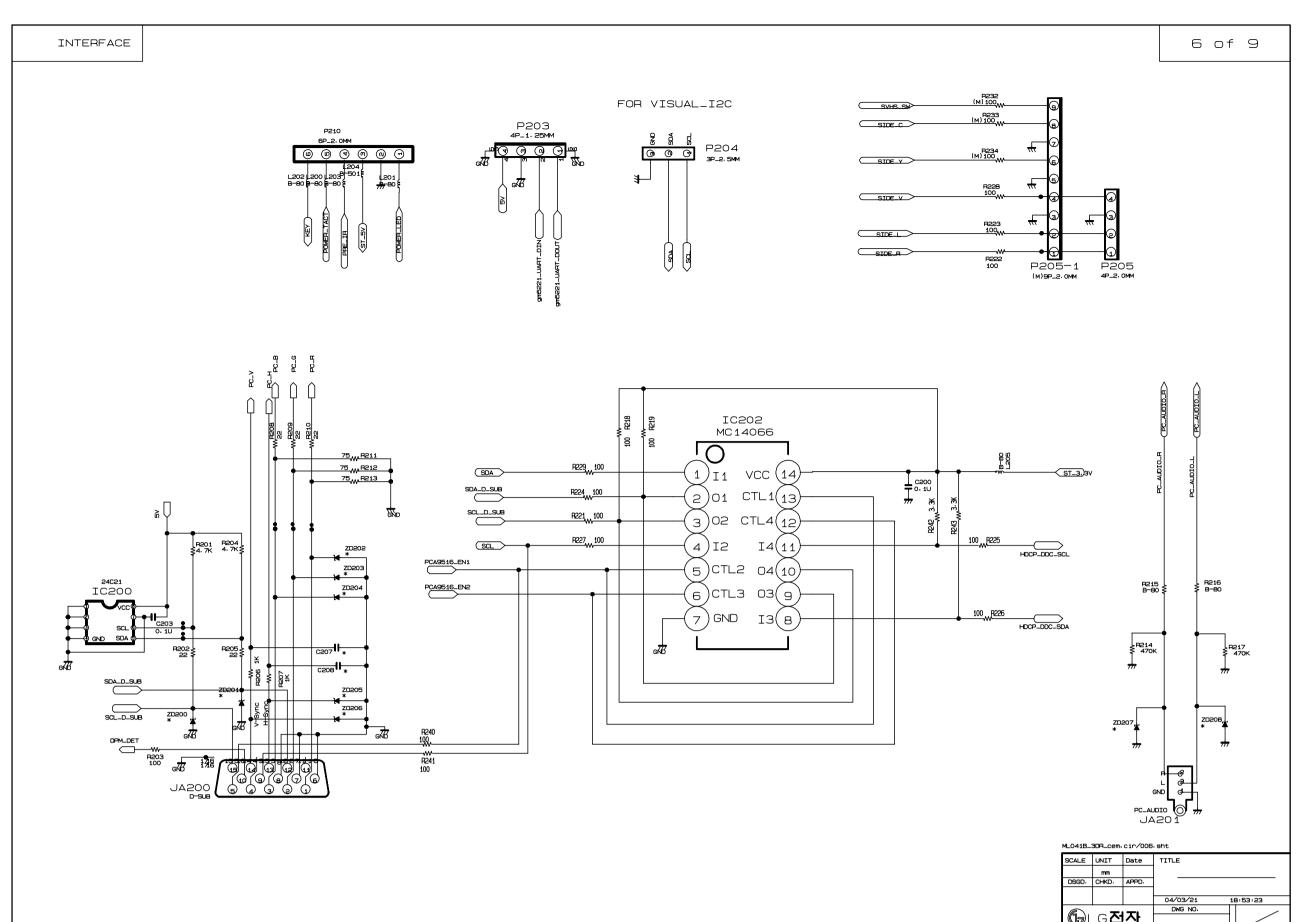

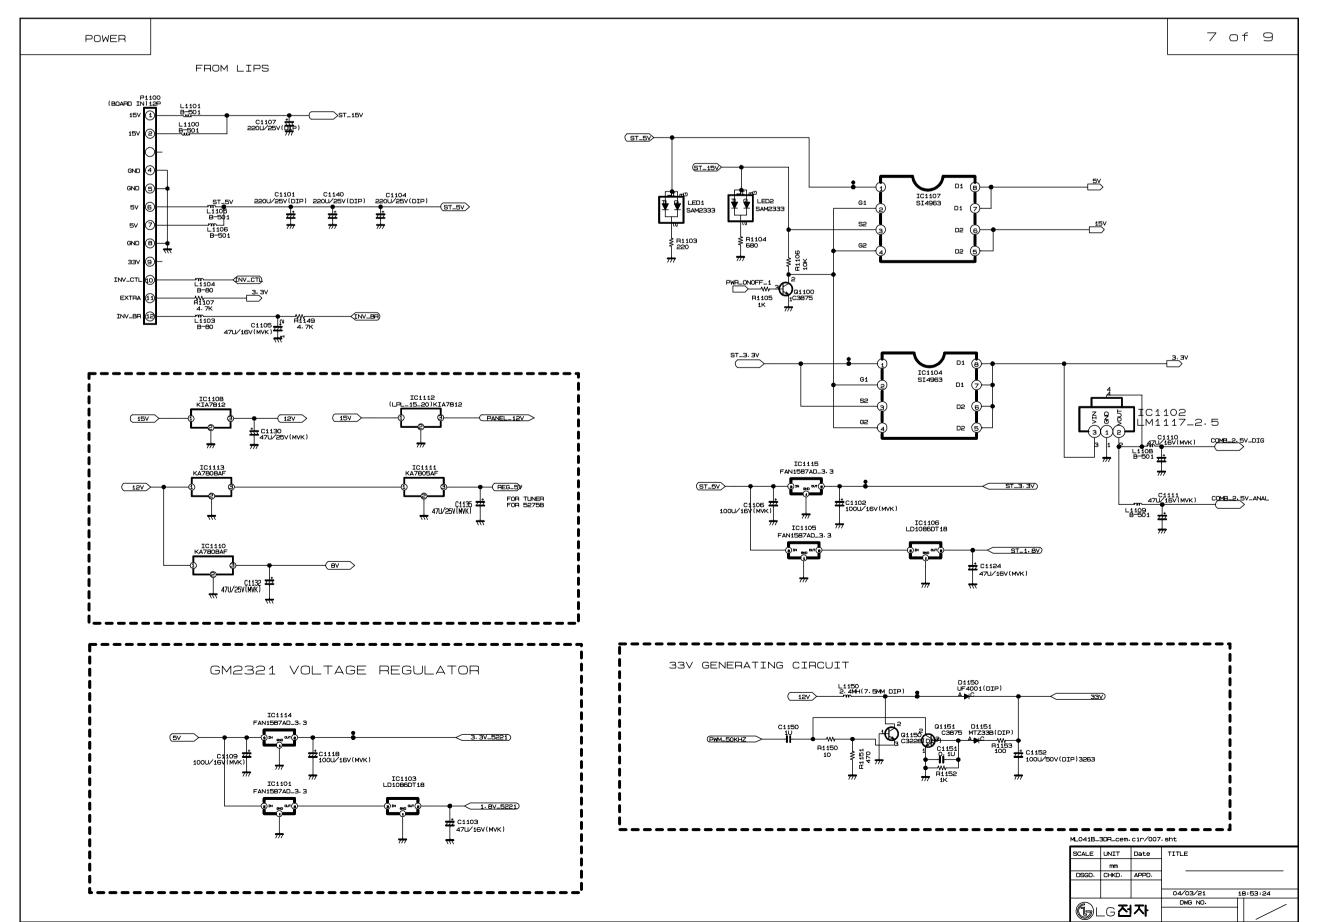

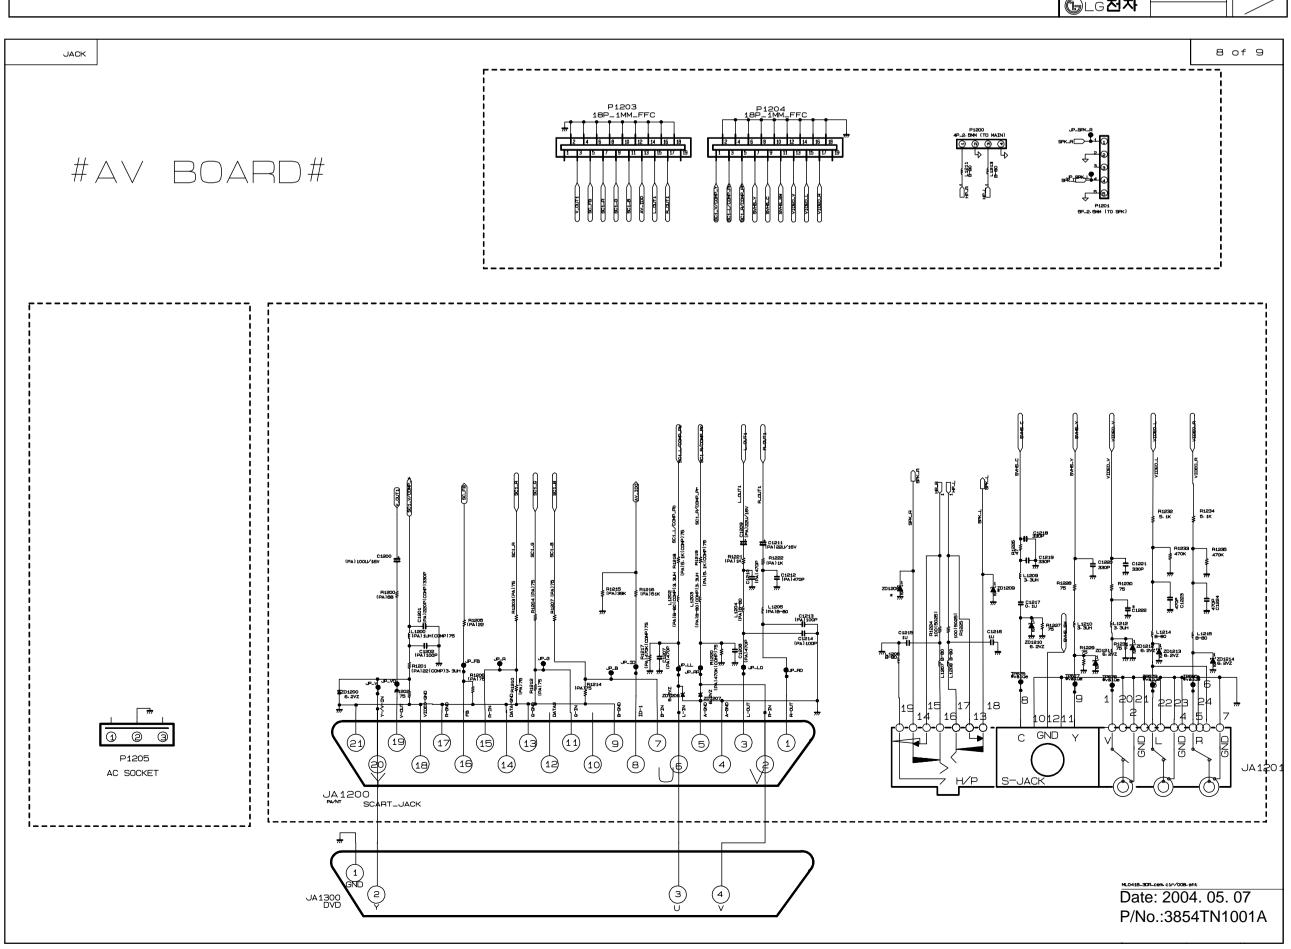



Jan., 2005 P/NO : 3828TSL108Y Printed in Korea